





Lotus 72 CAR02a Instructions

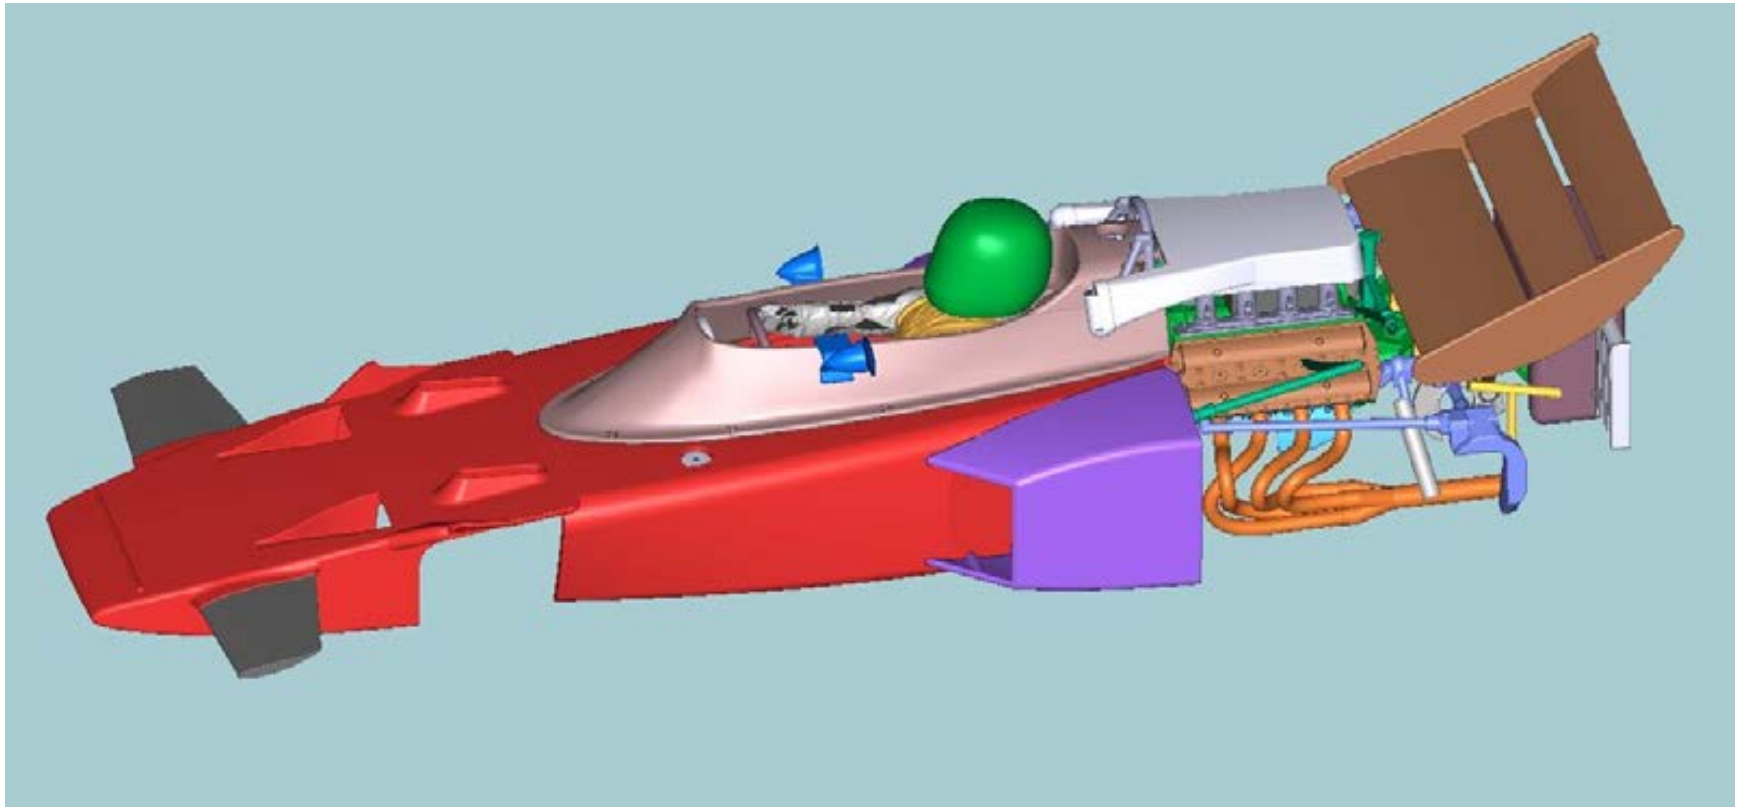


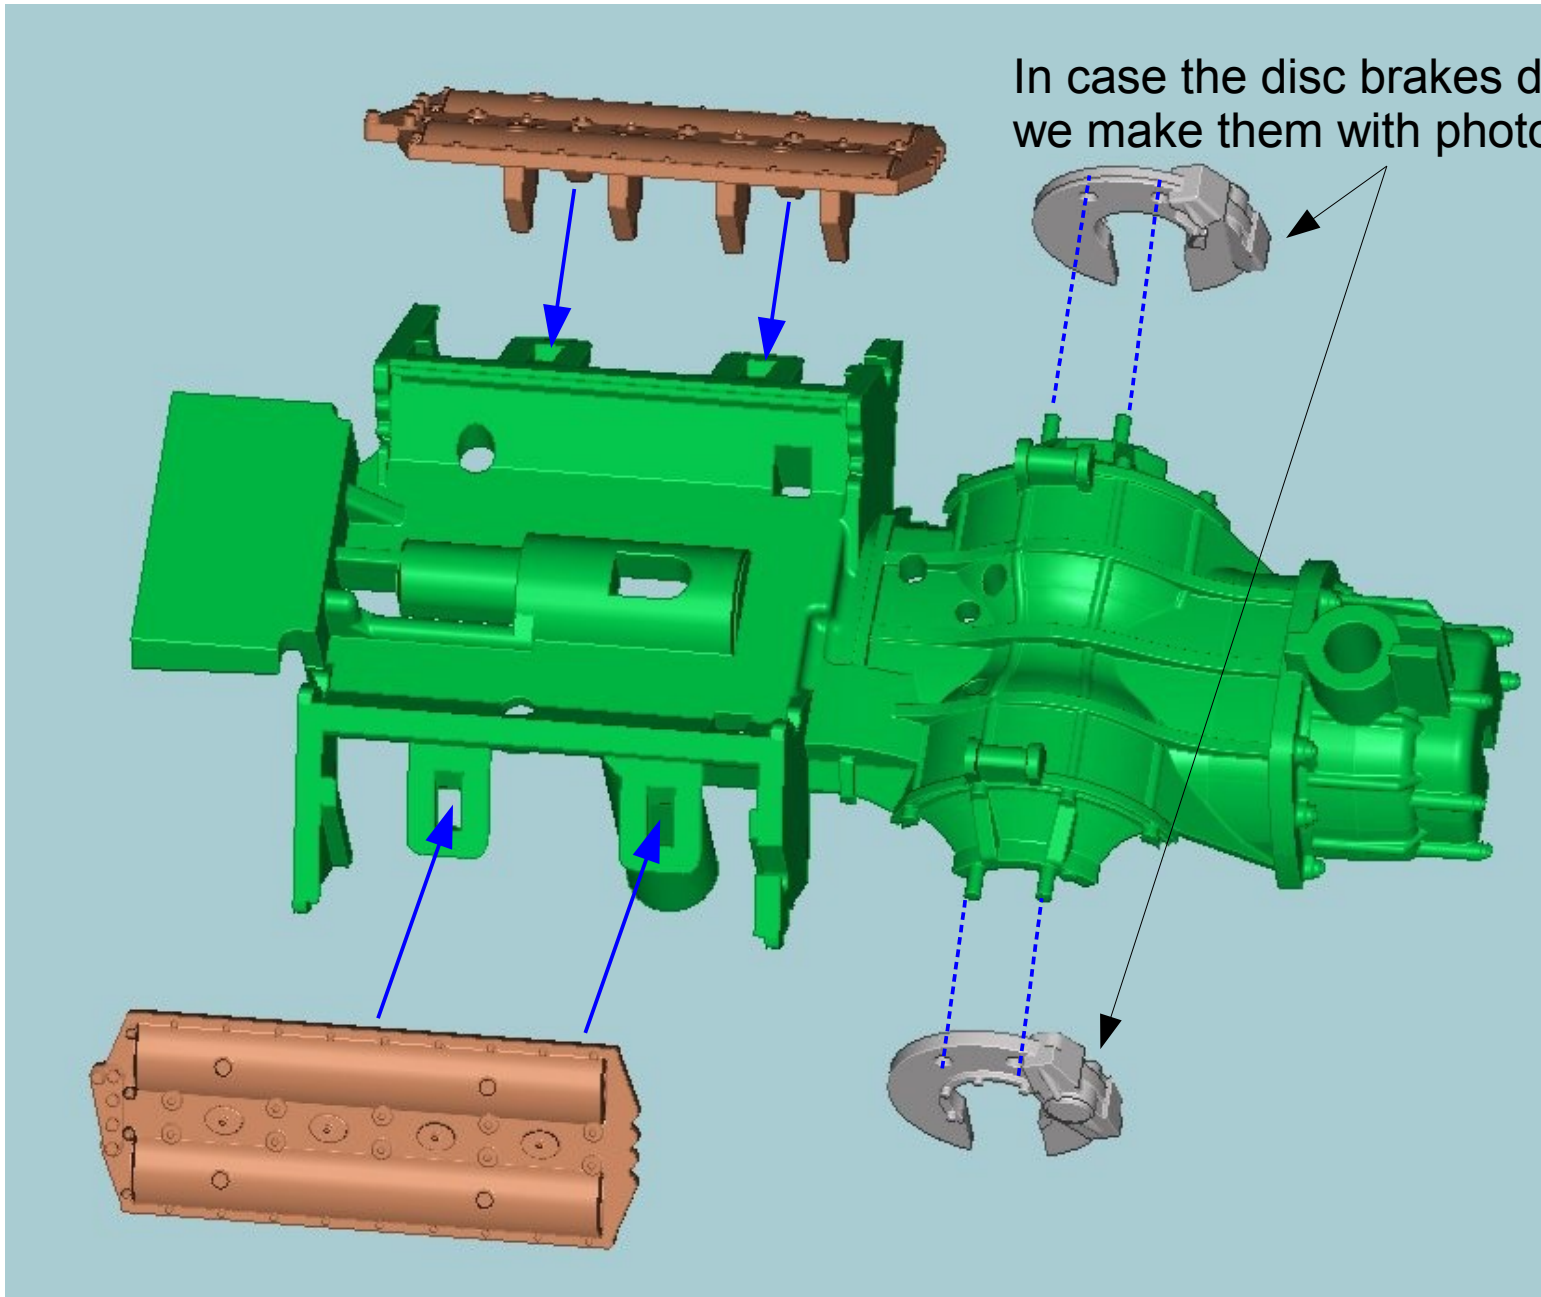


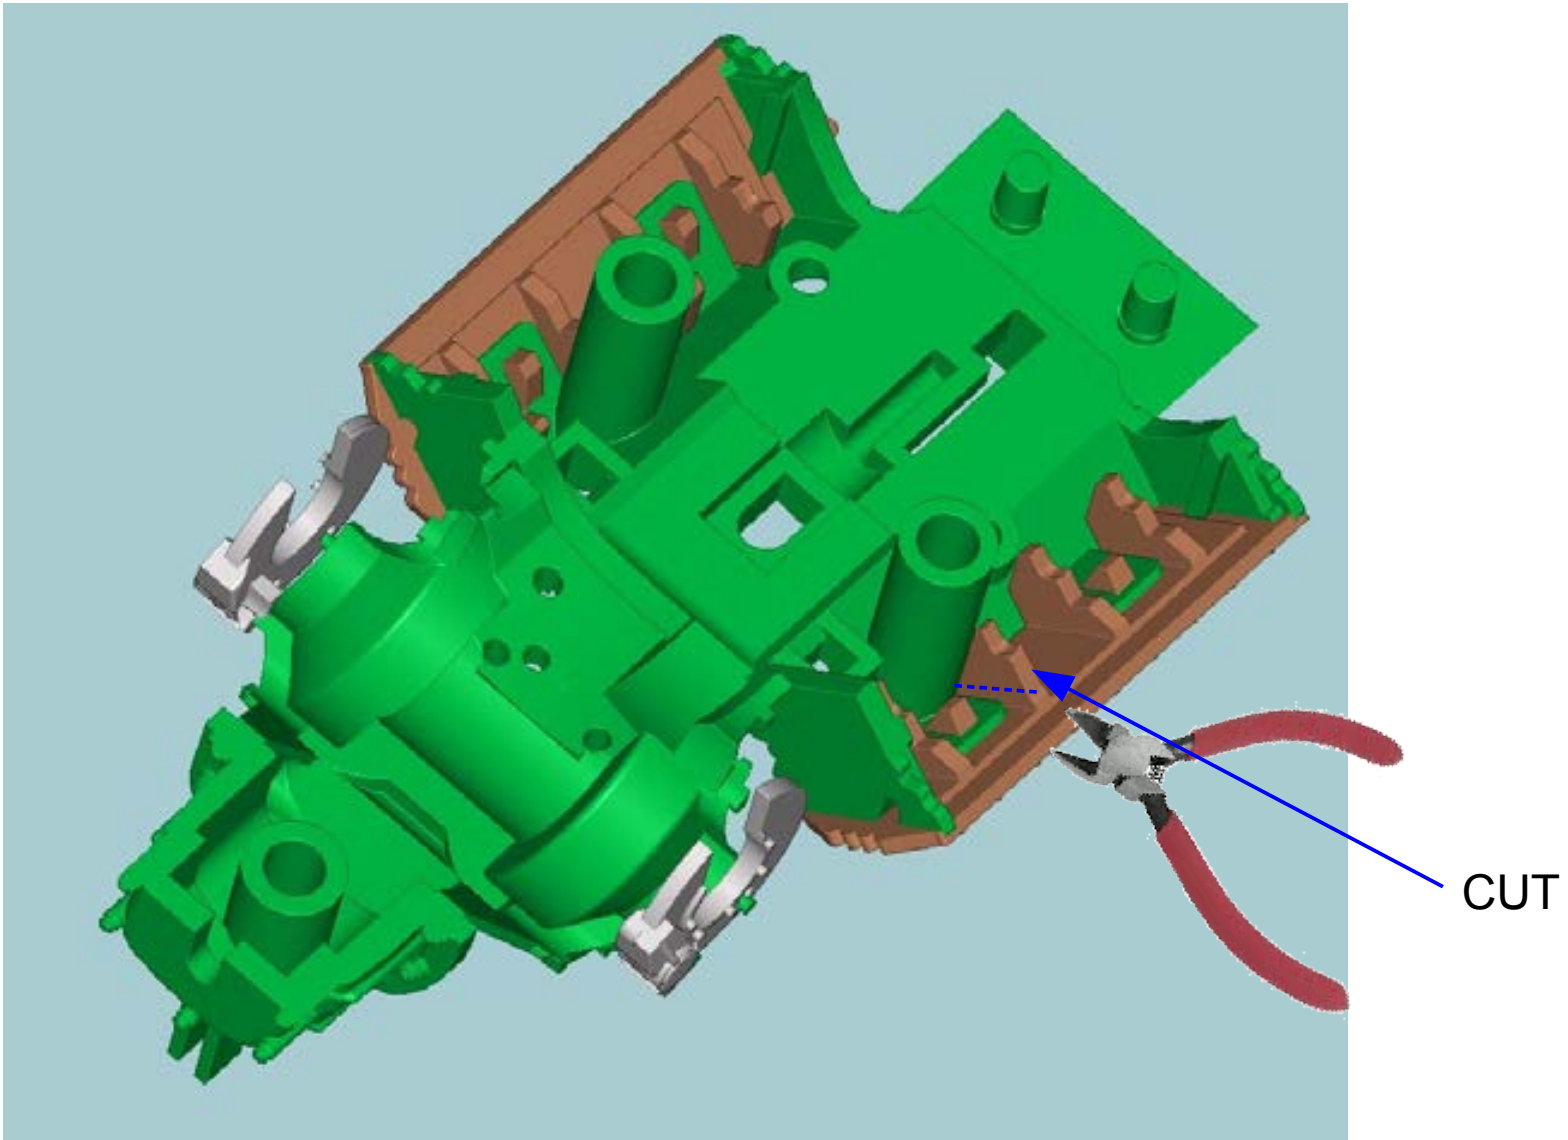


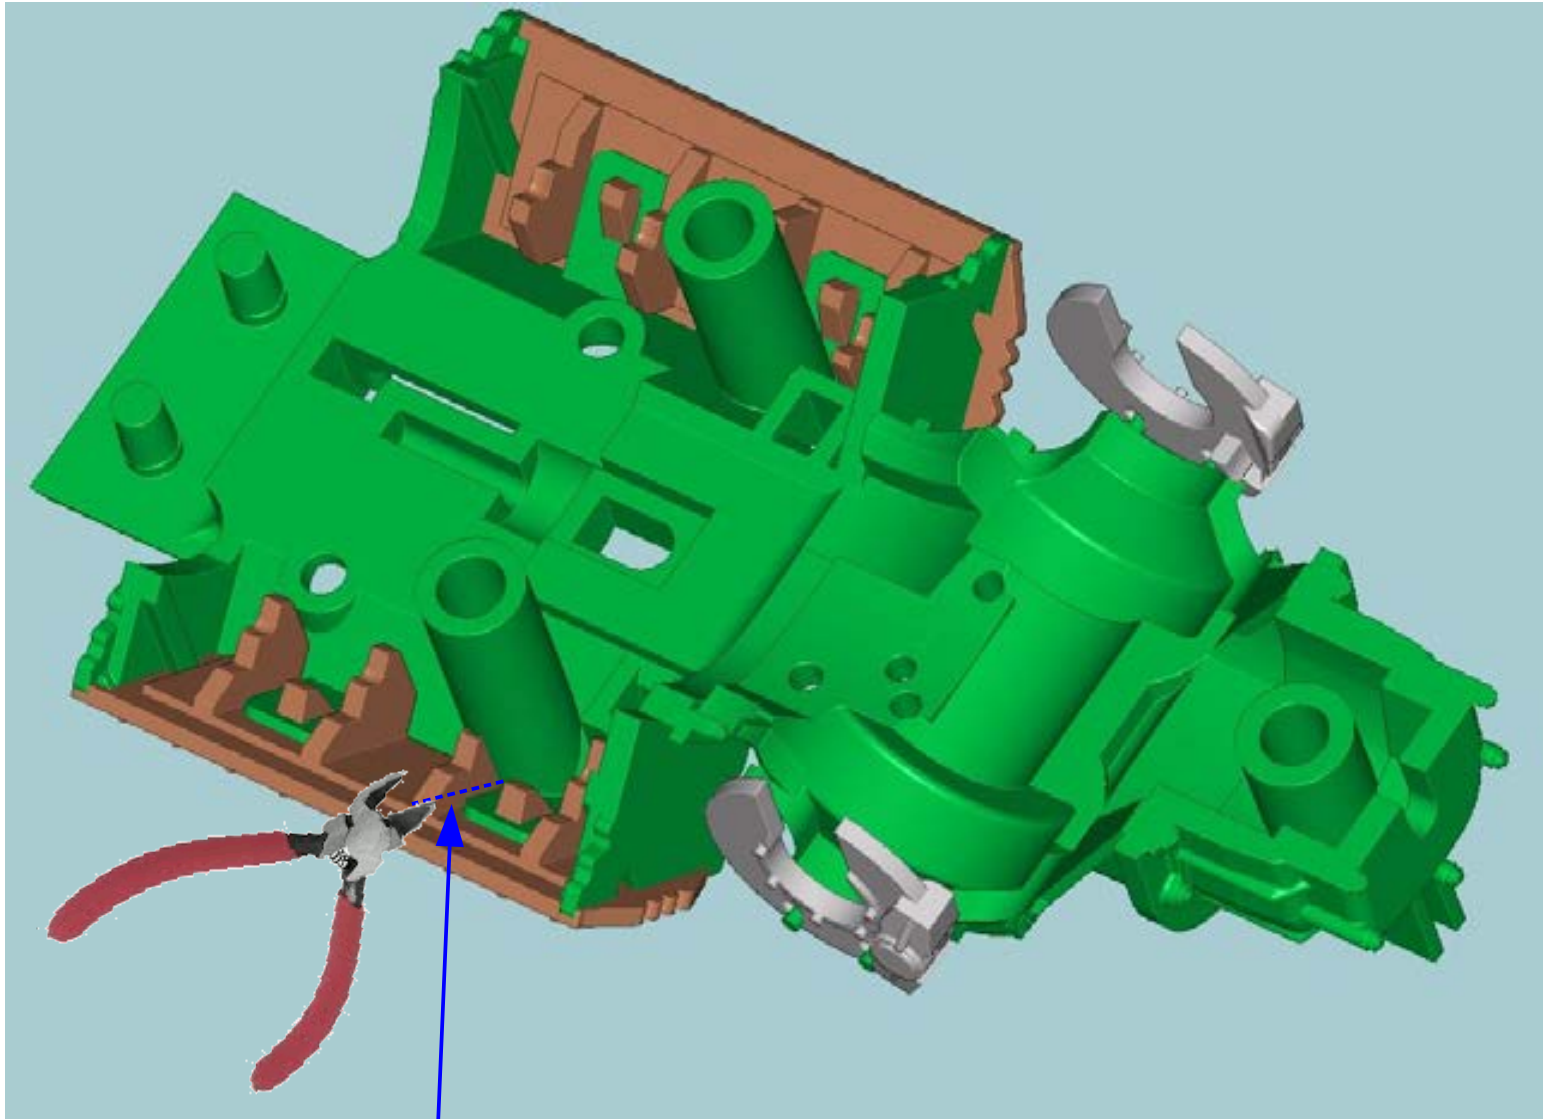



CUT

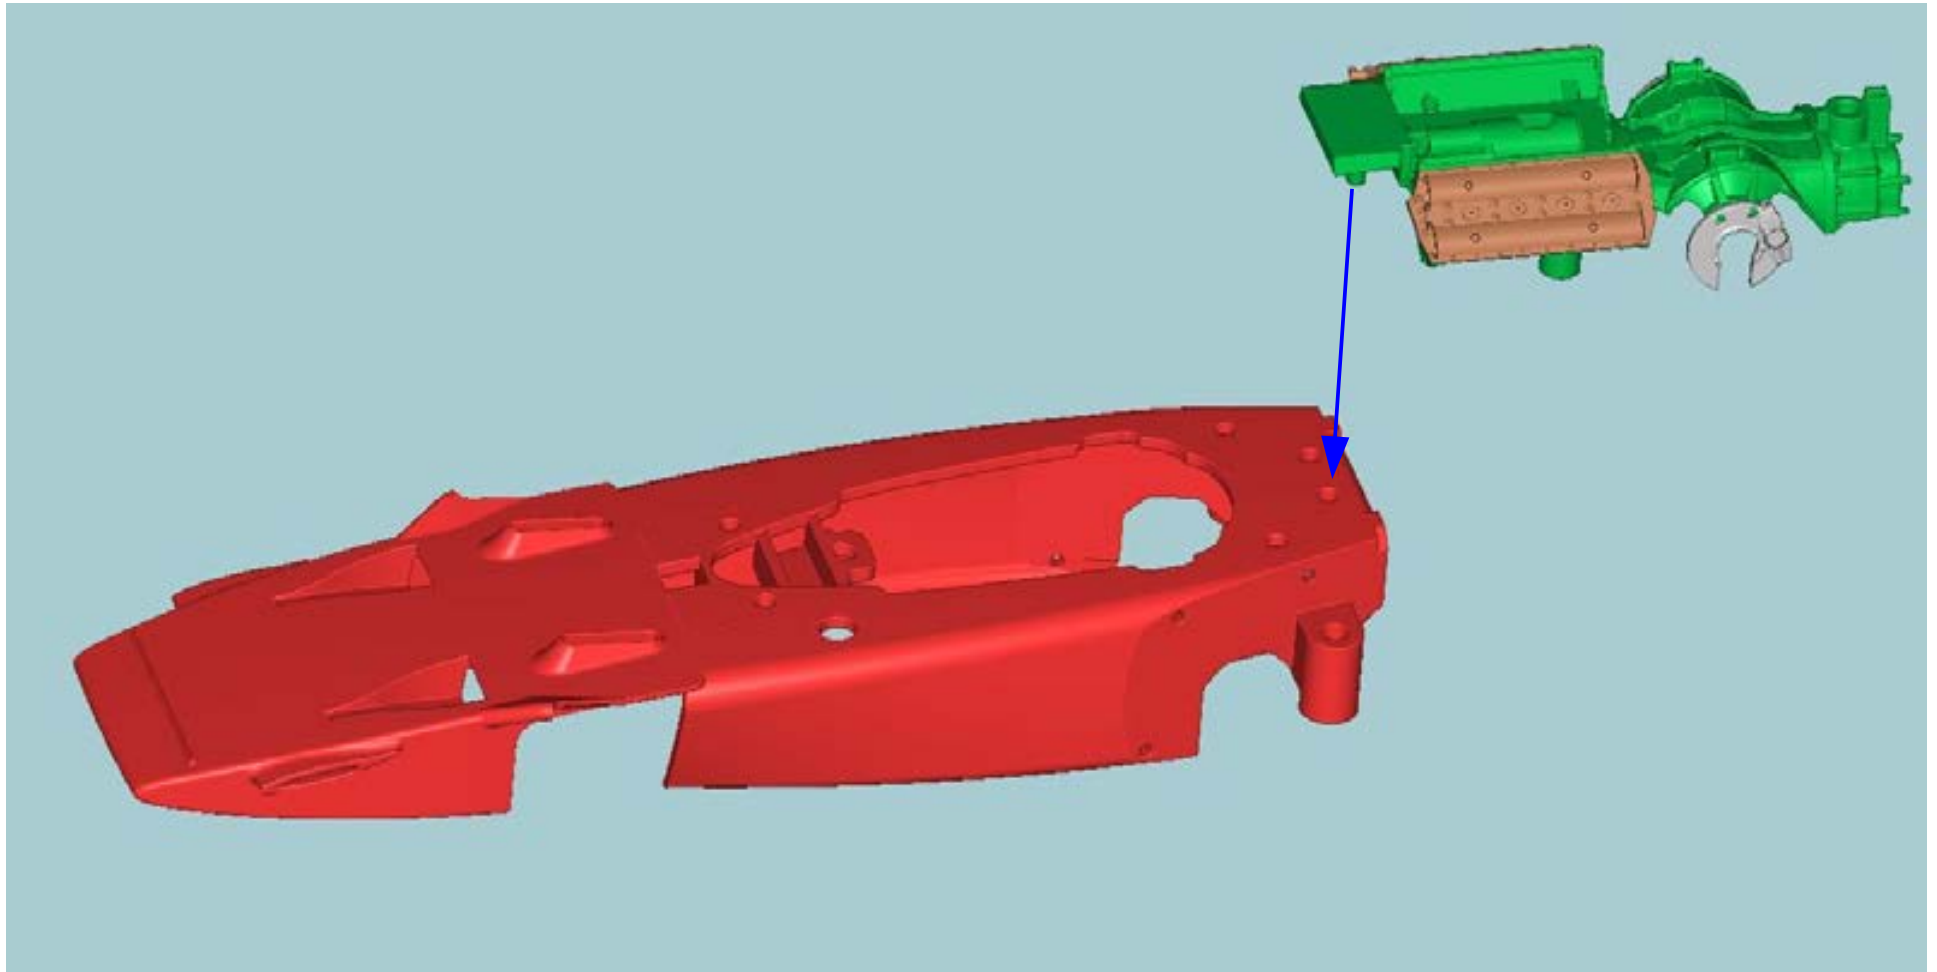


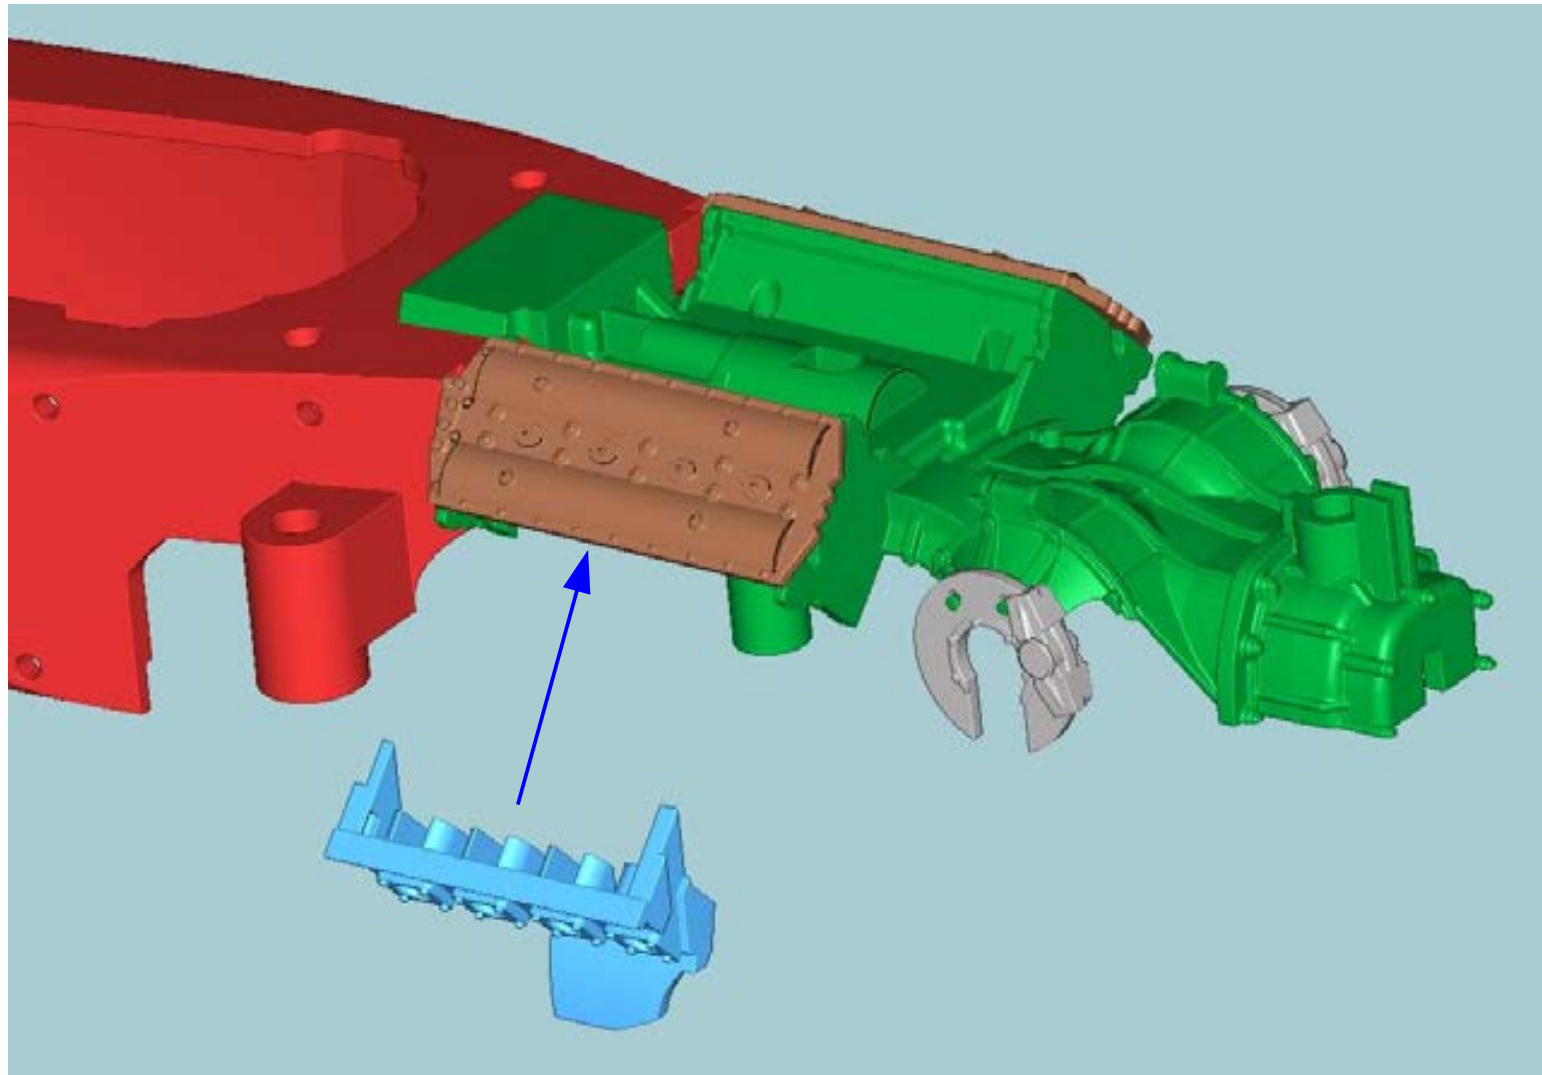


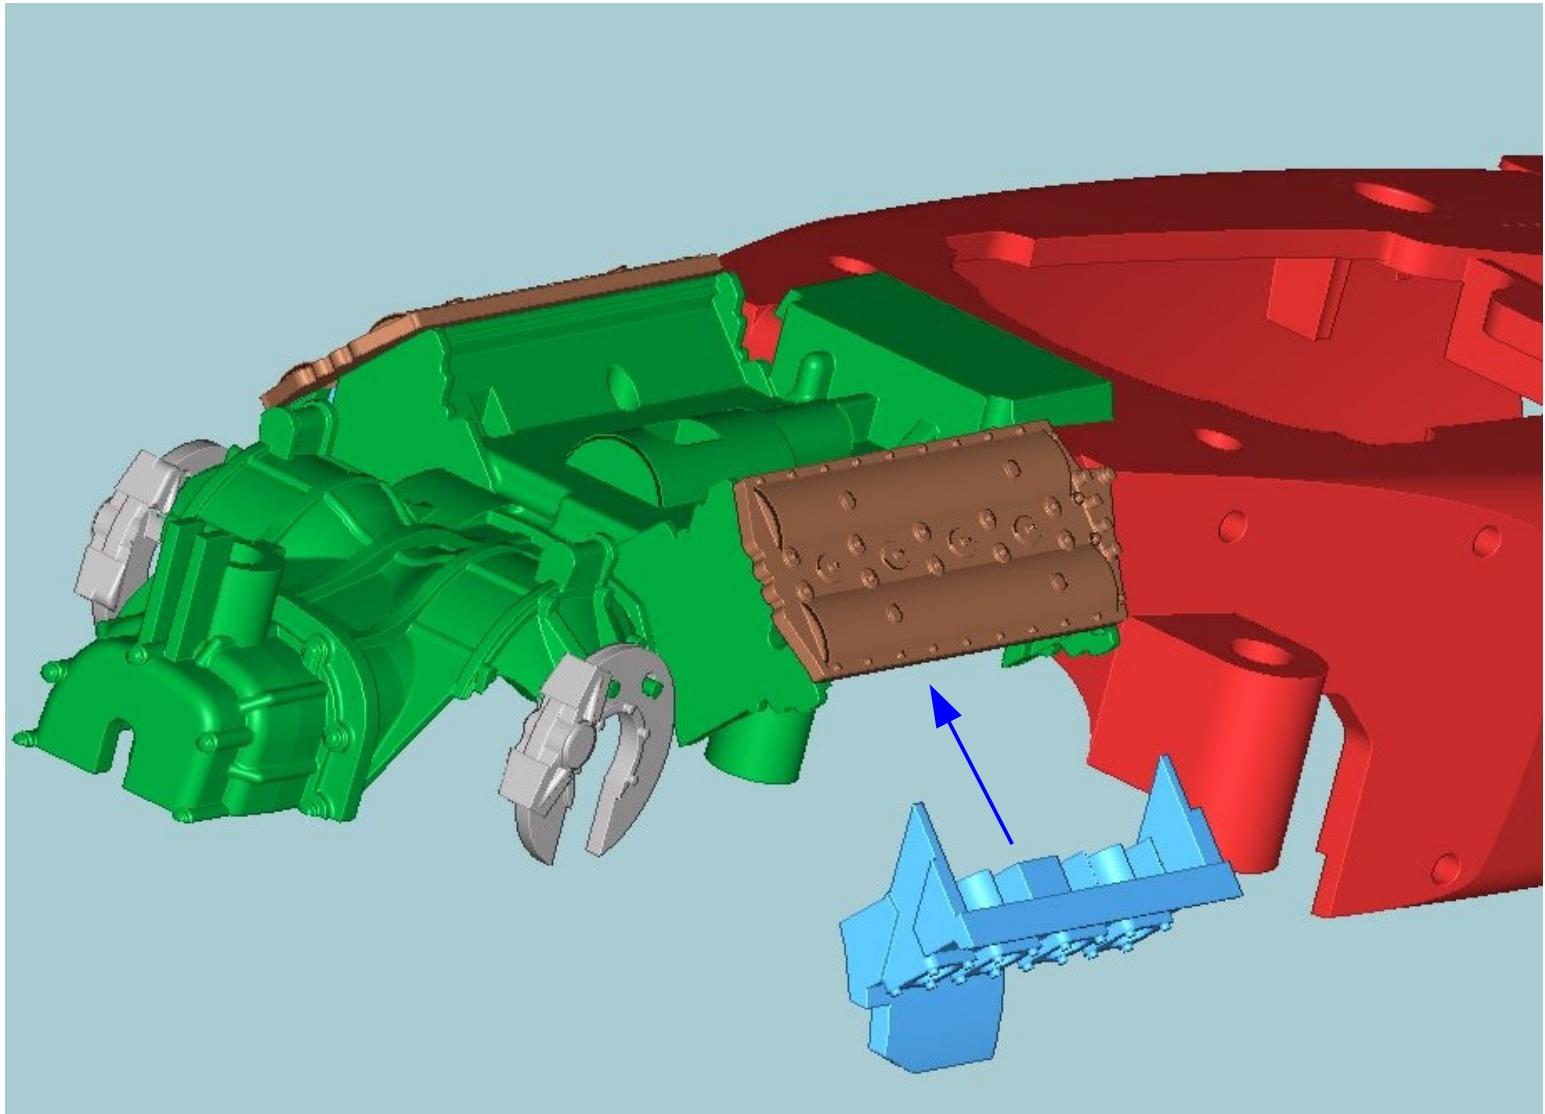



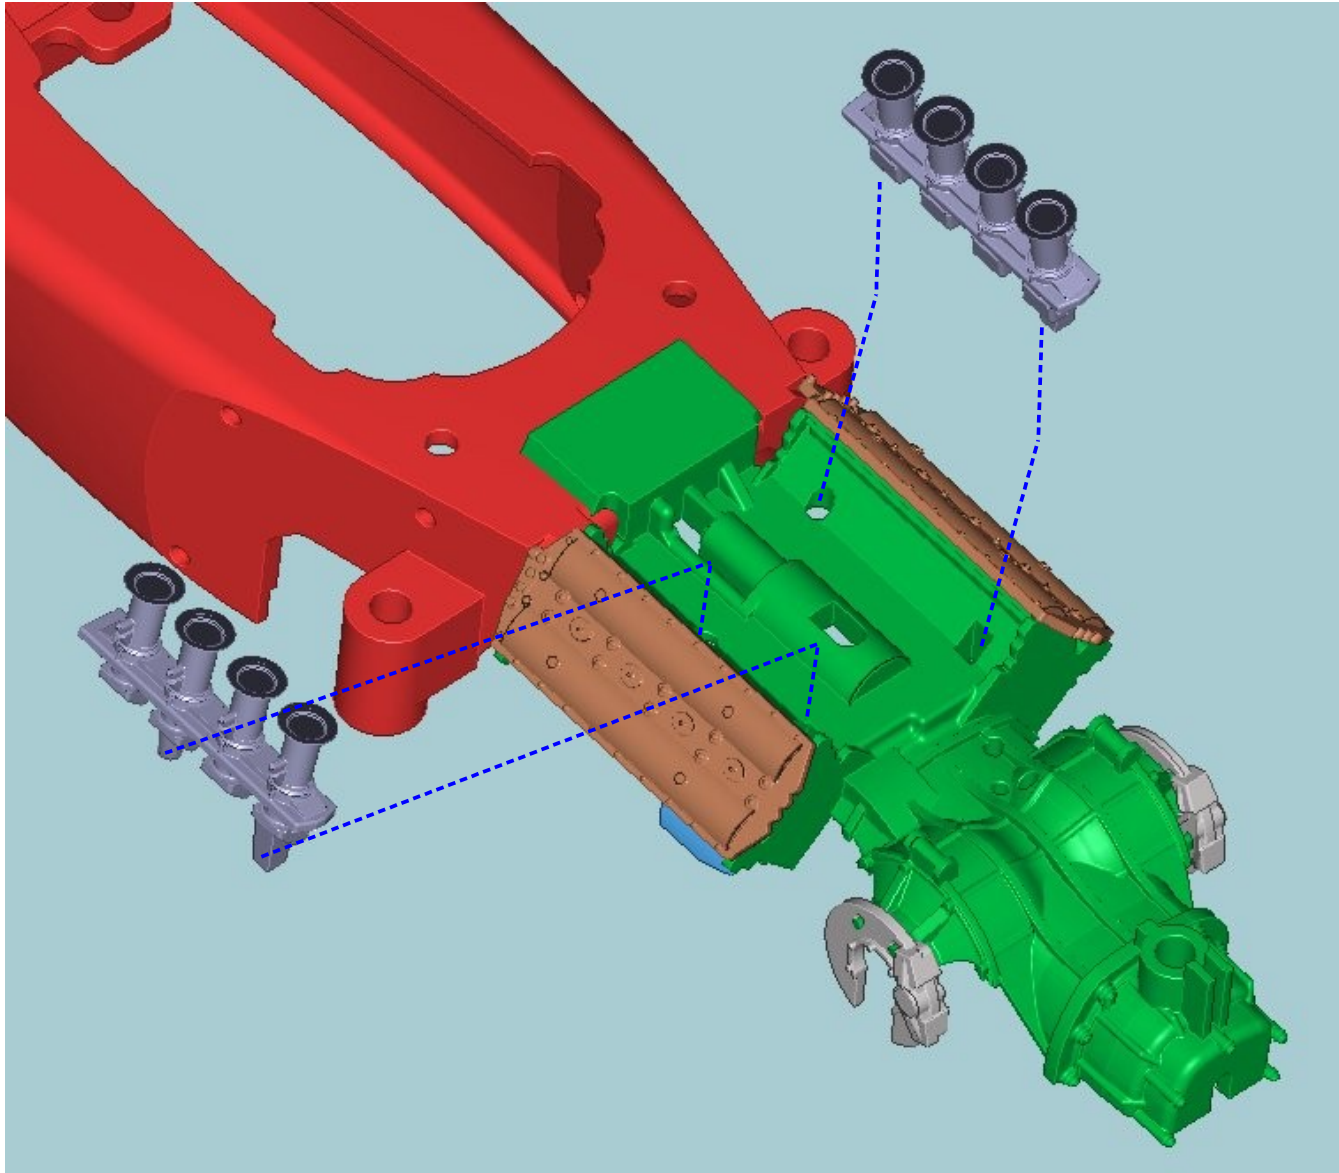


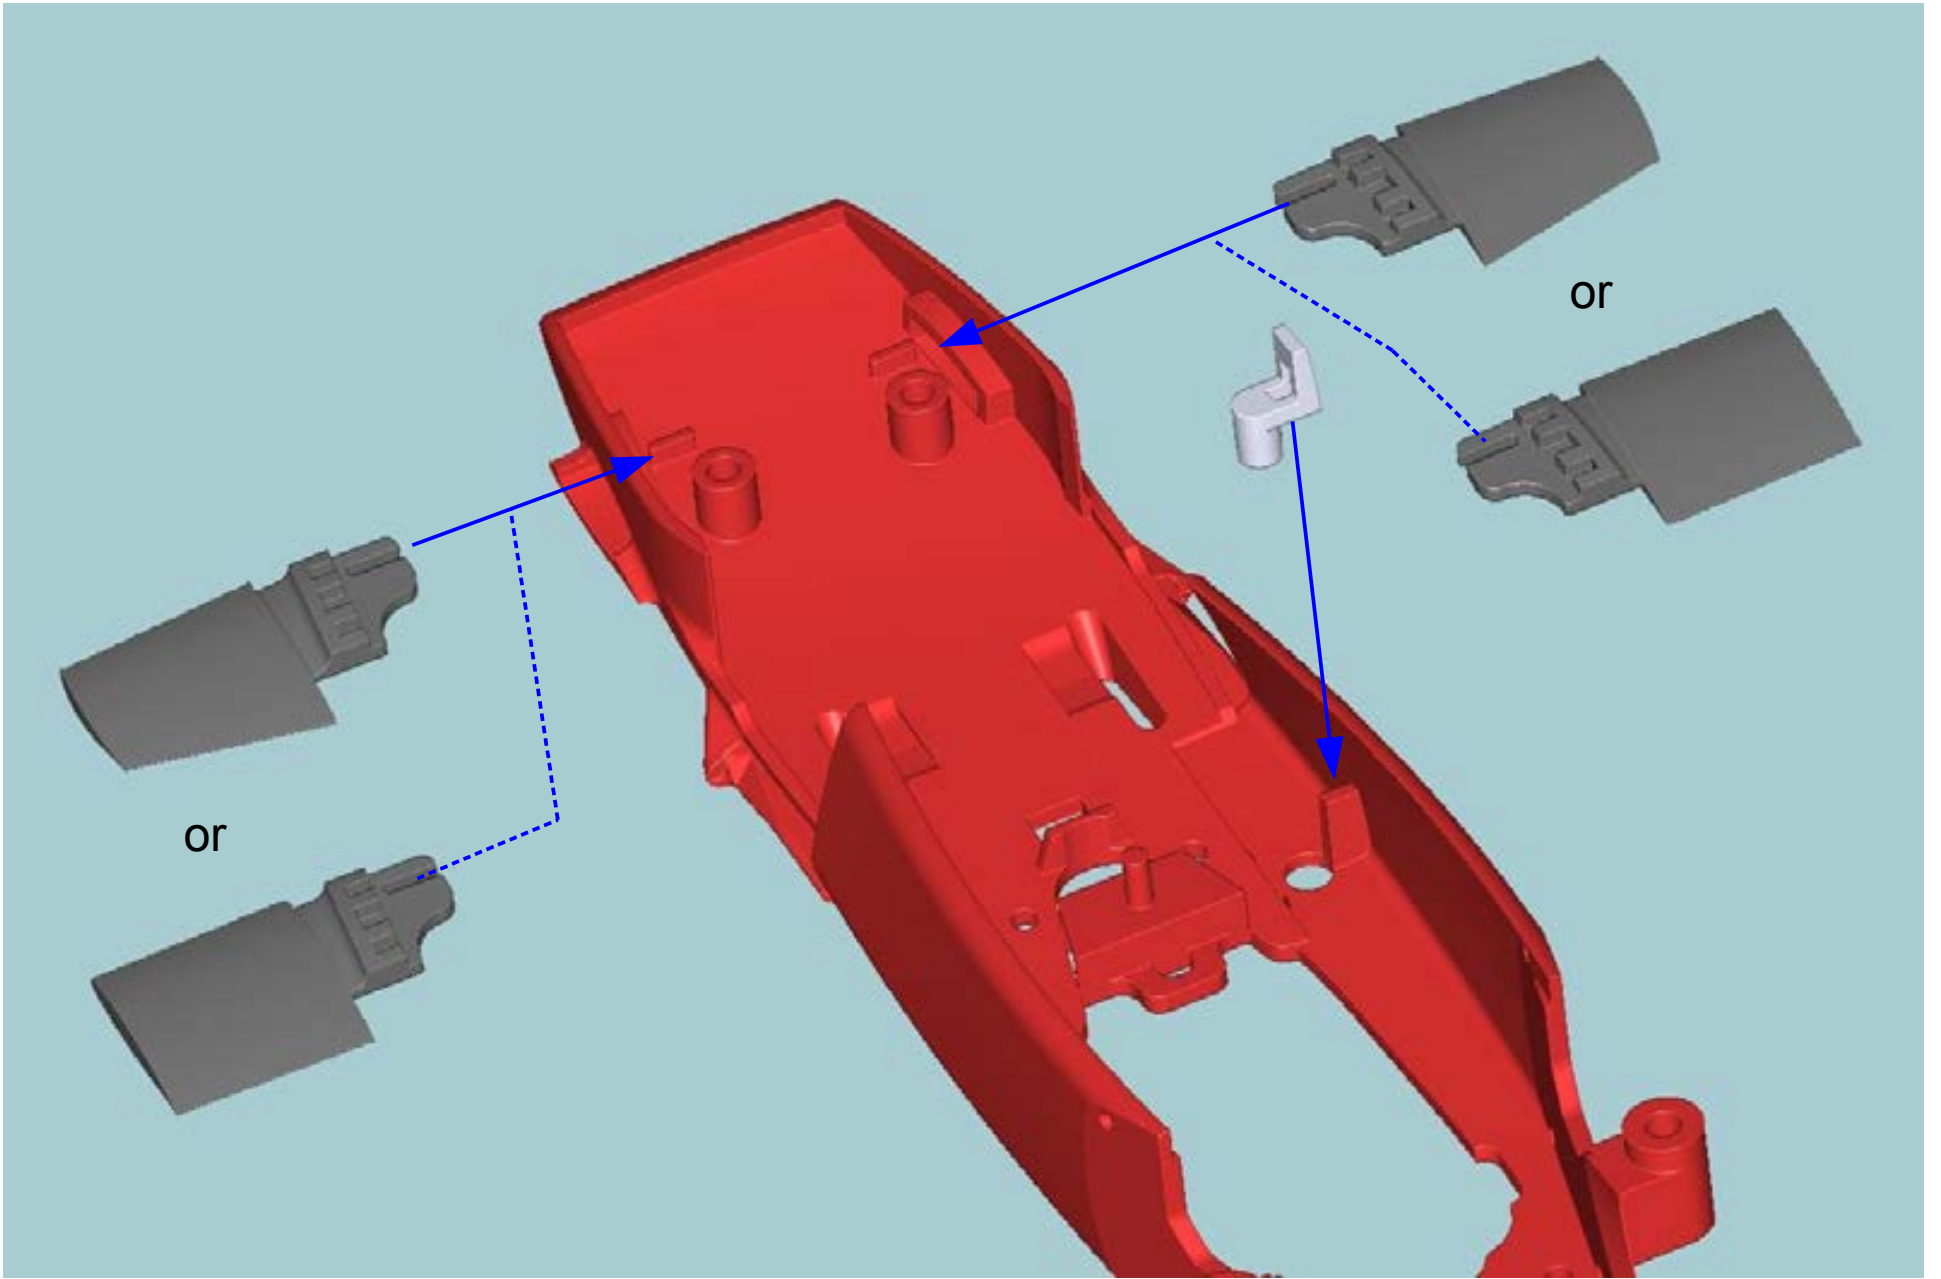


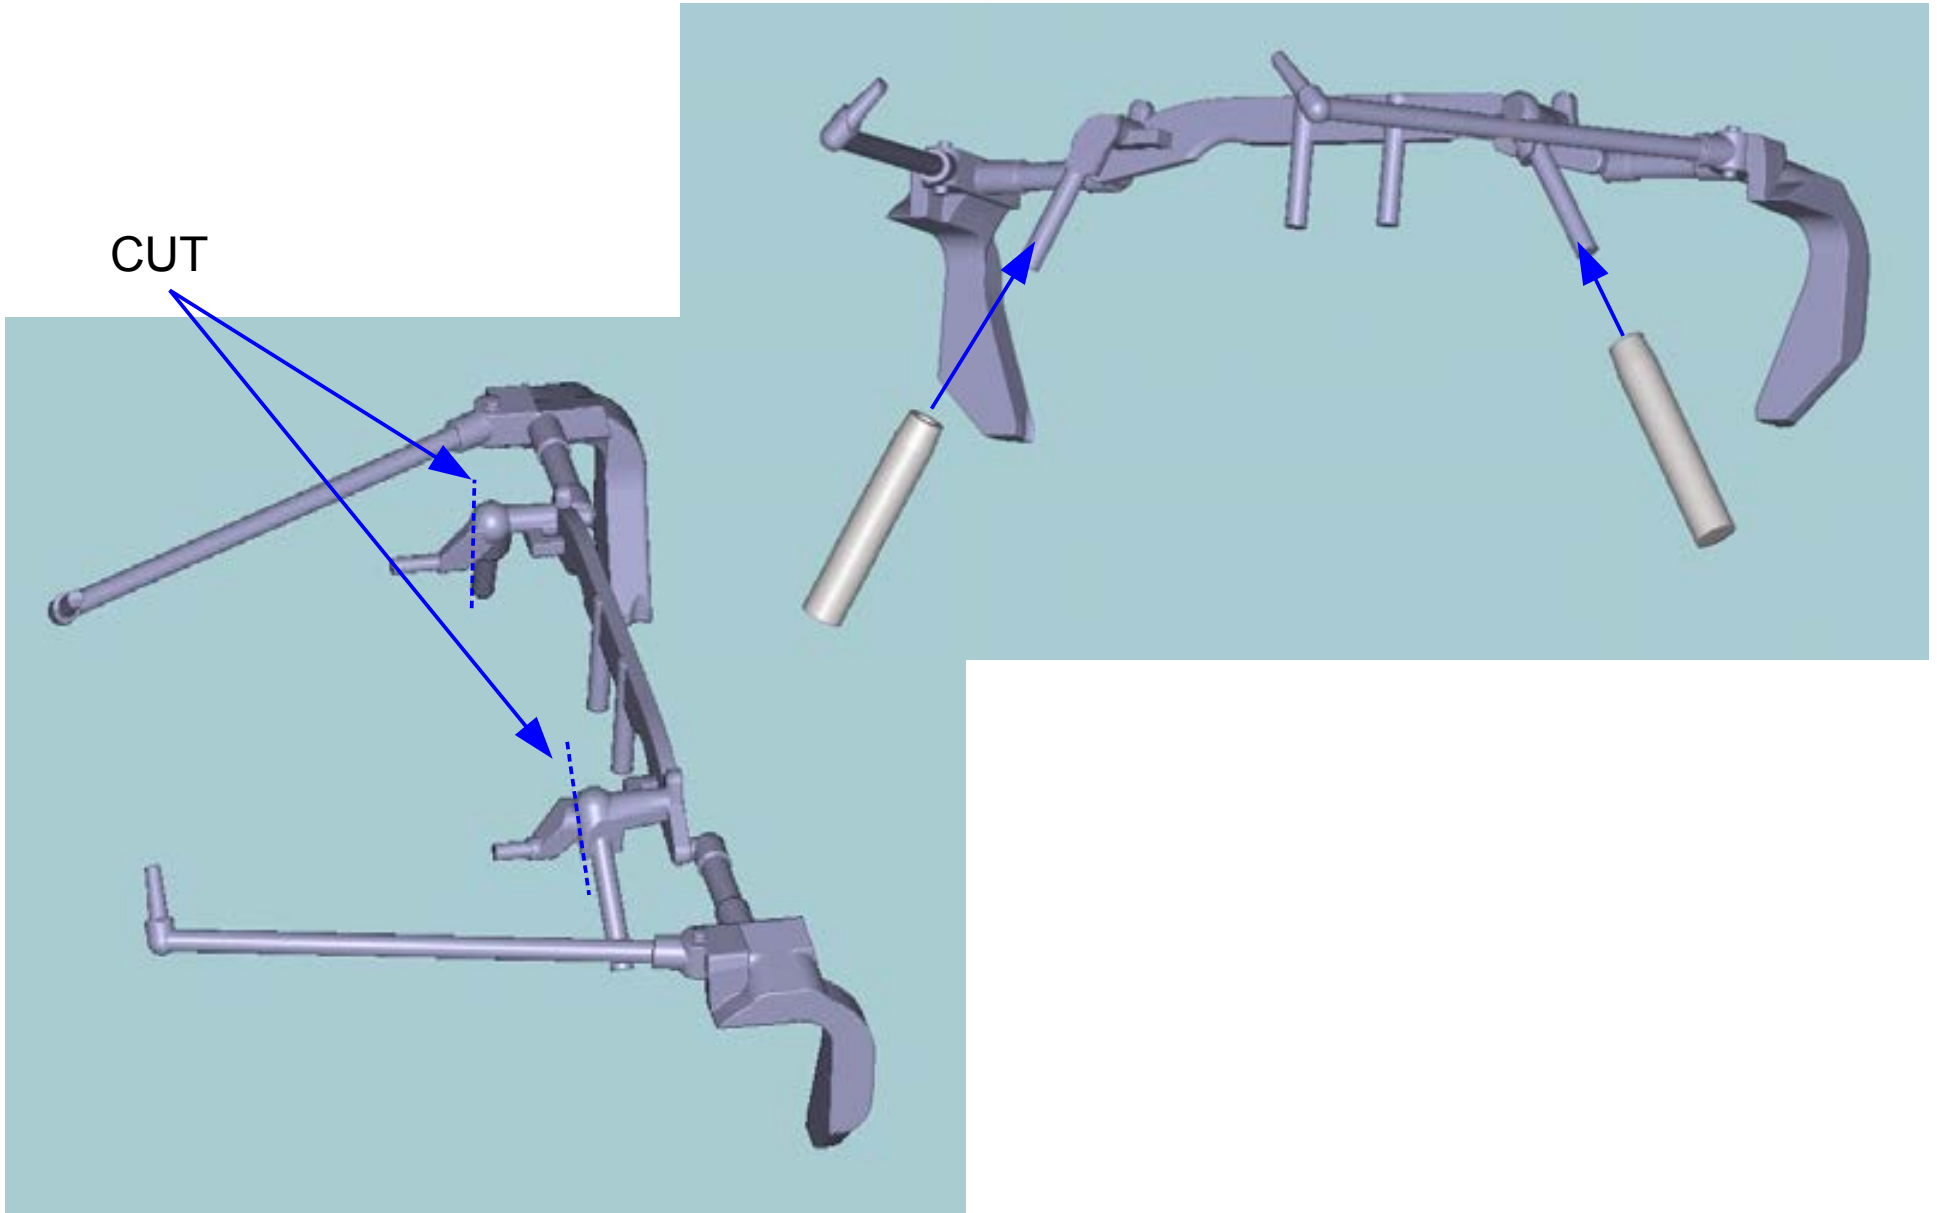


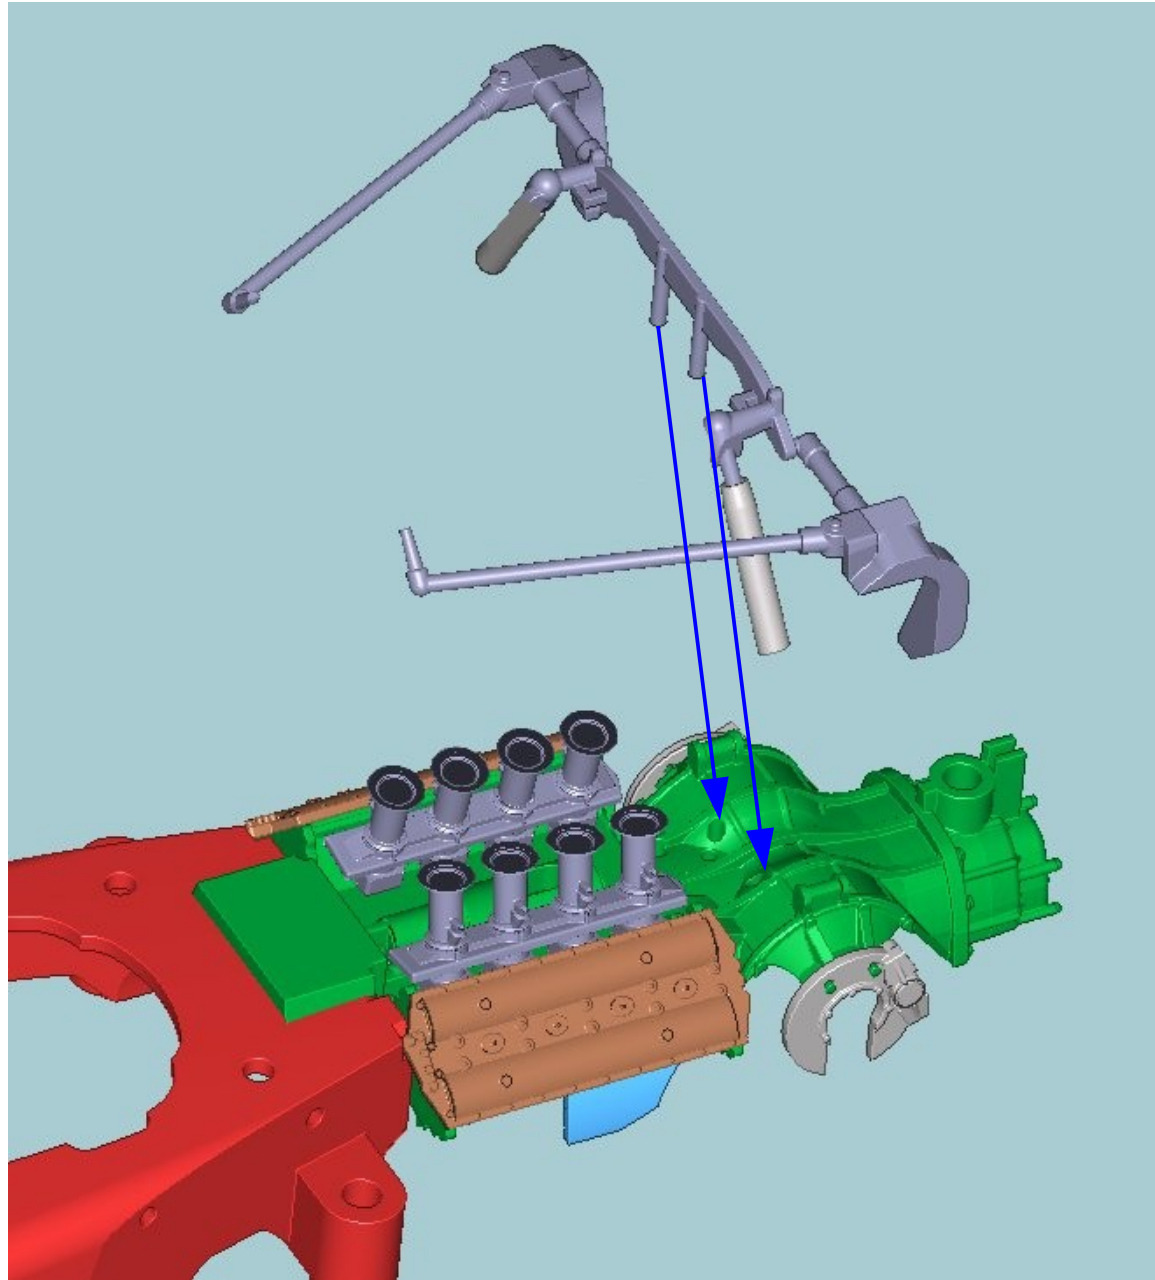


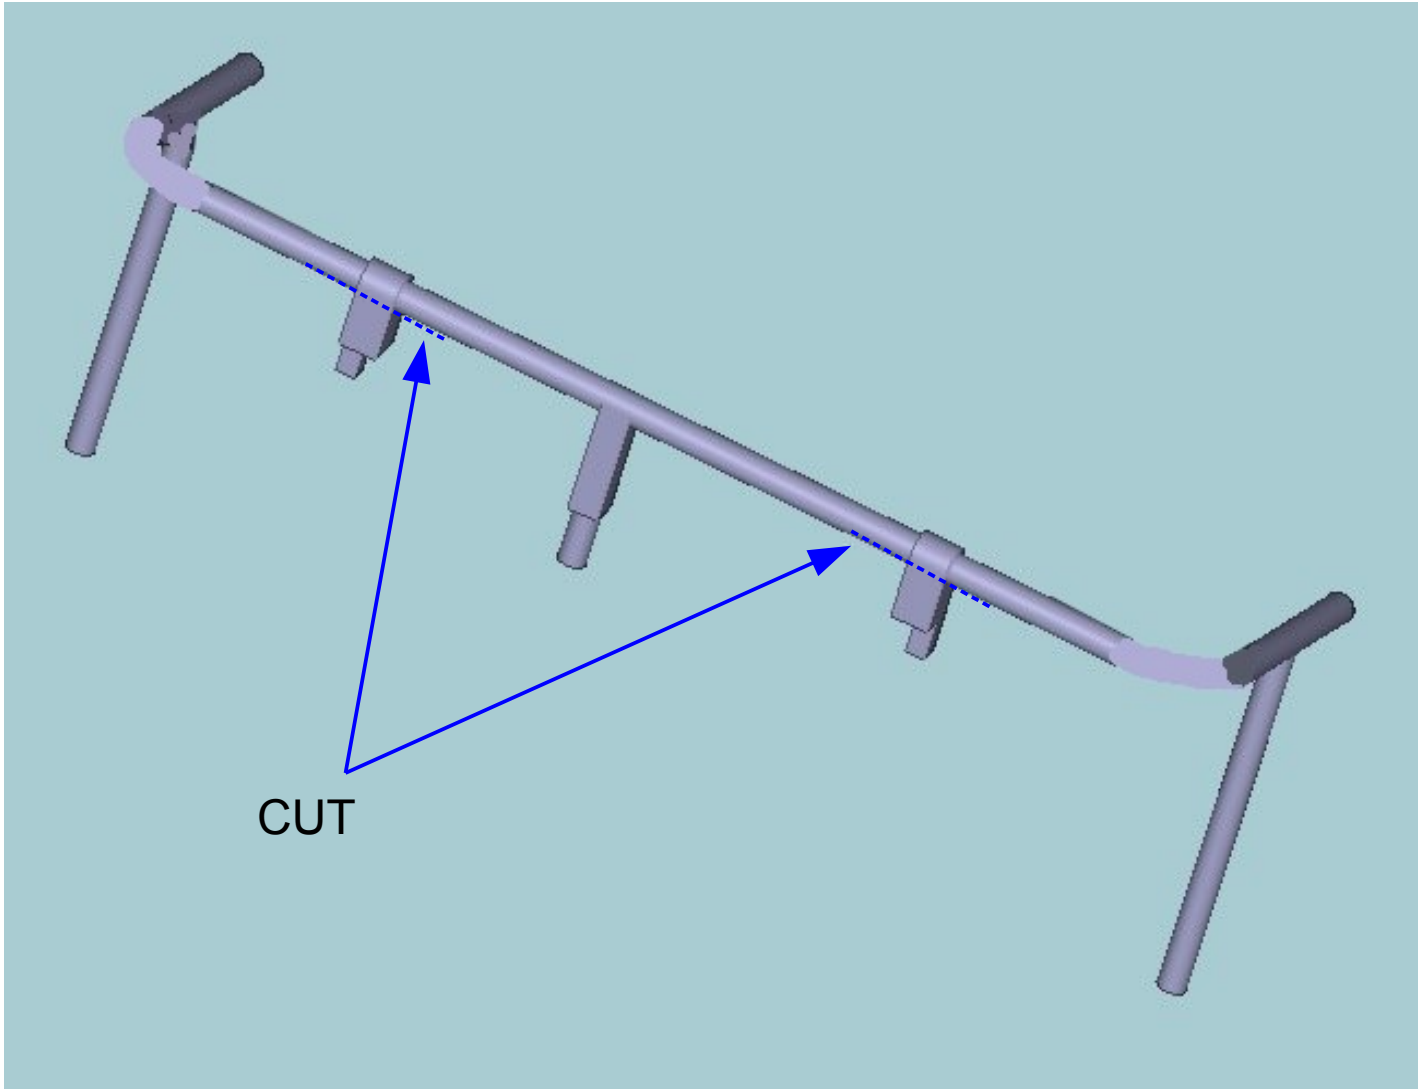


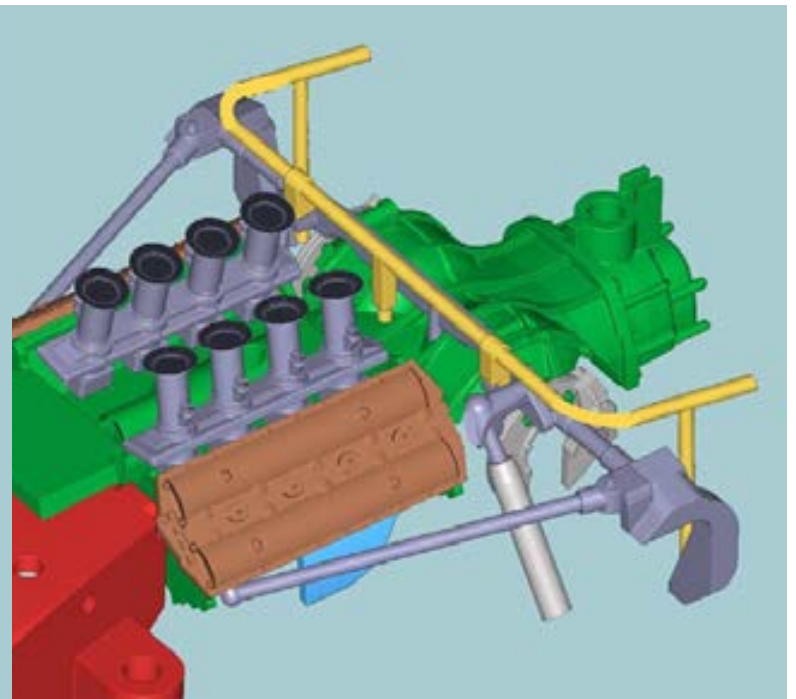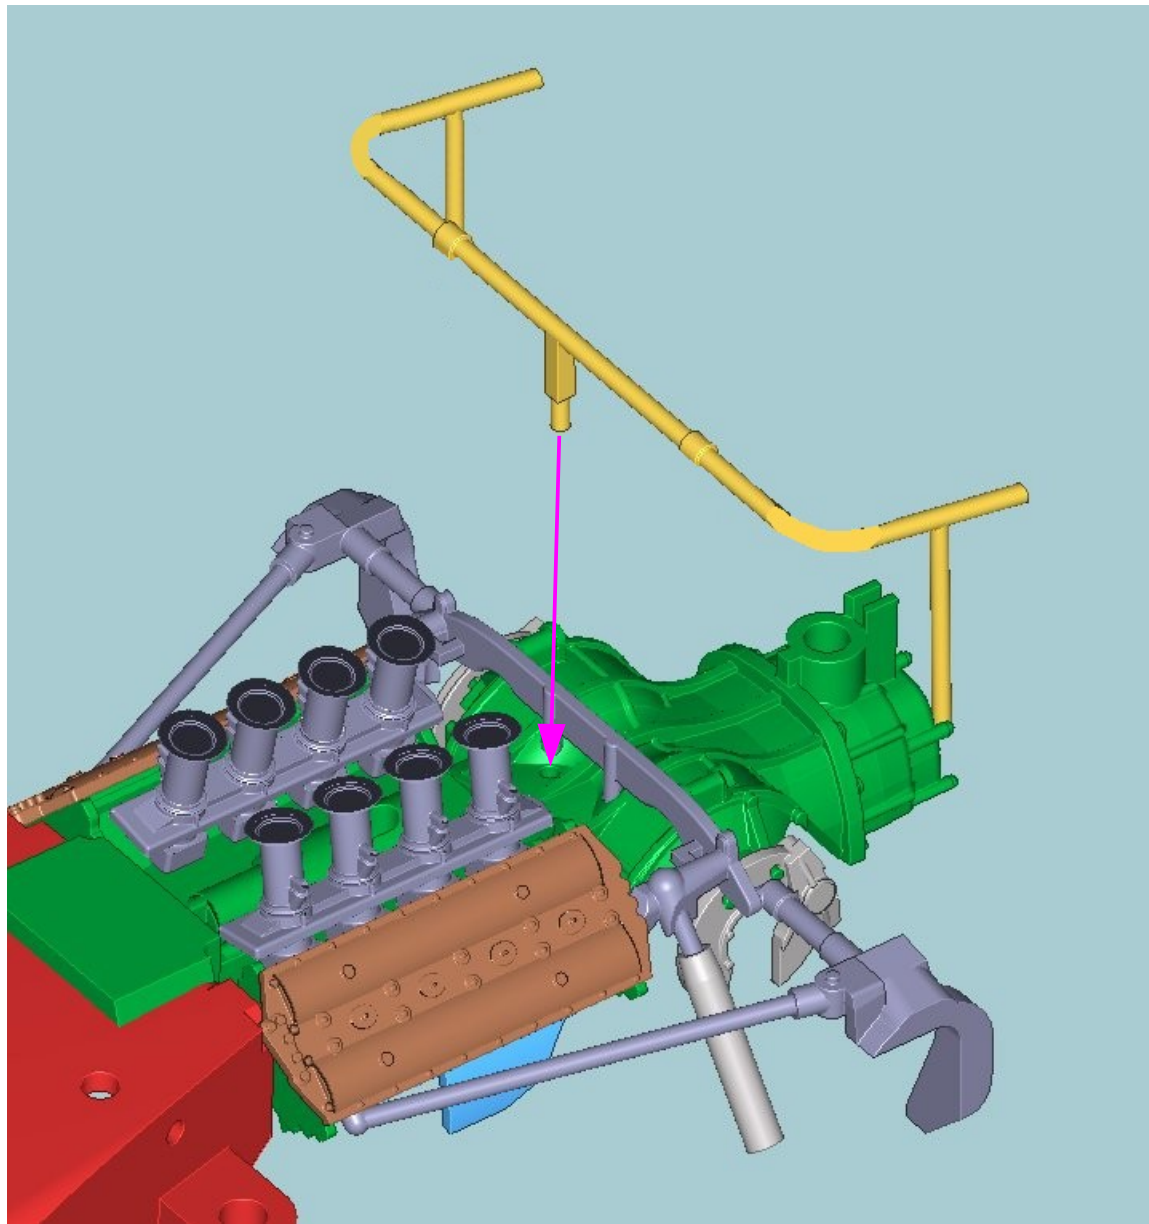


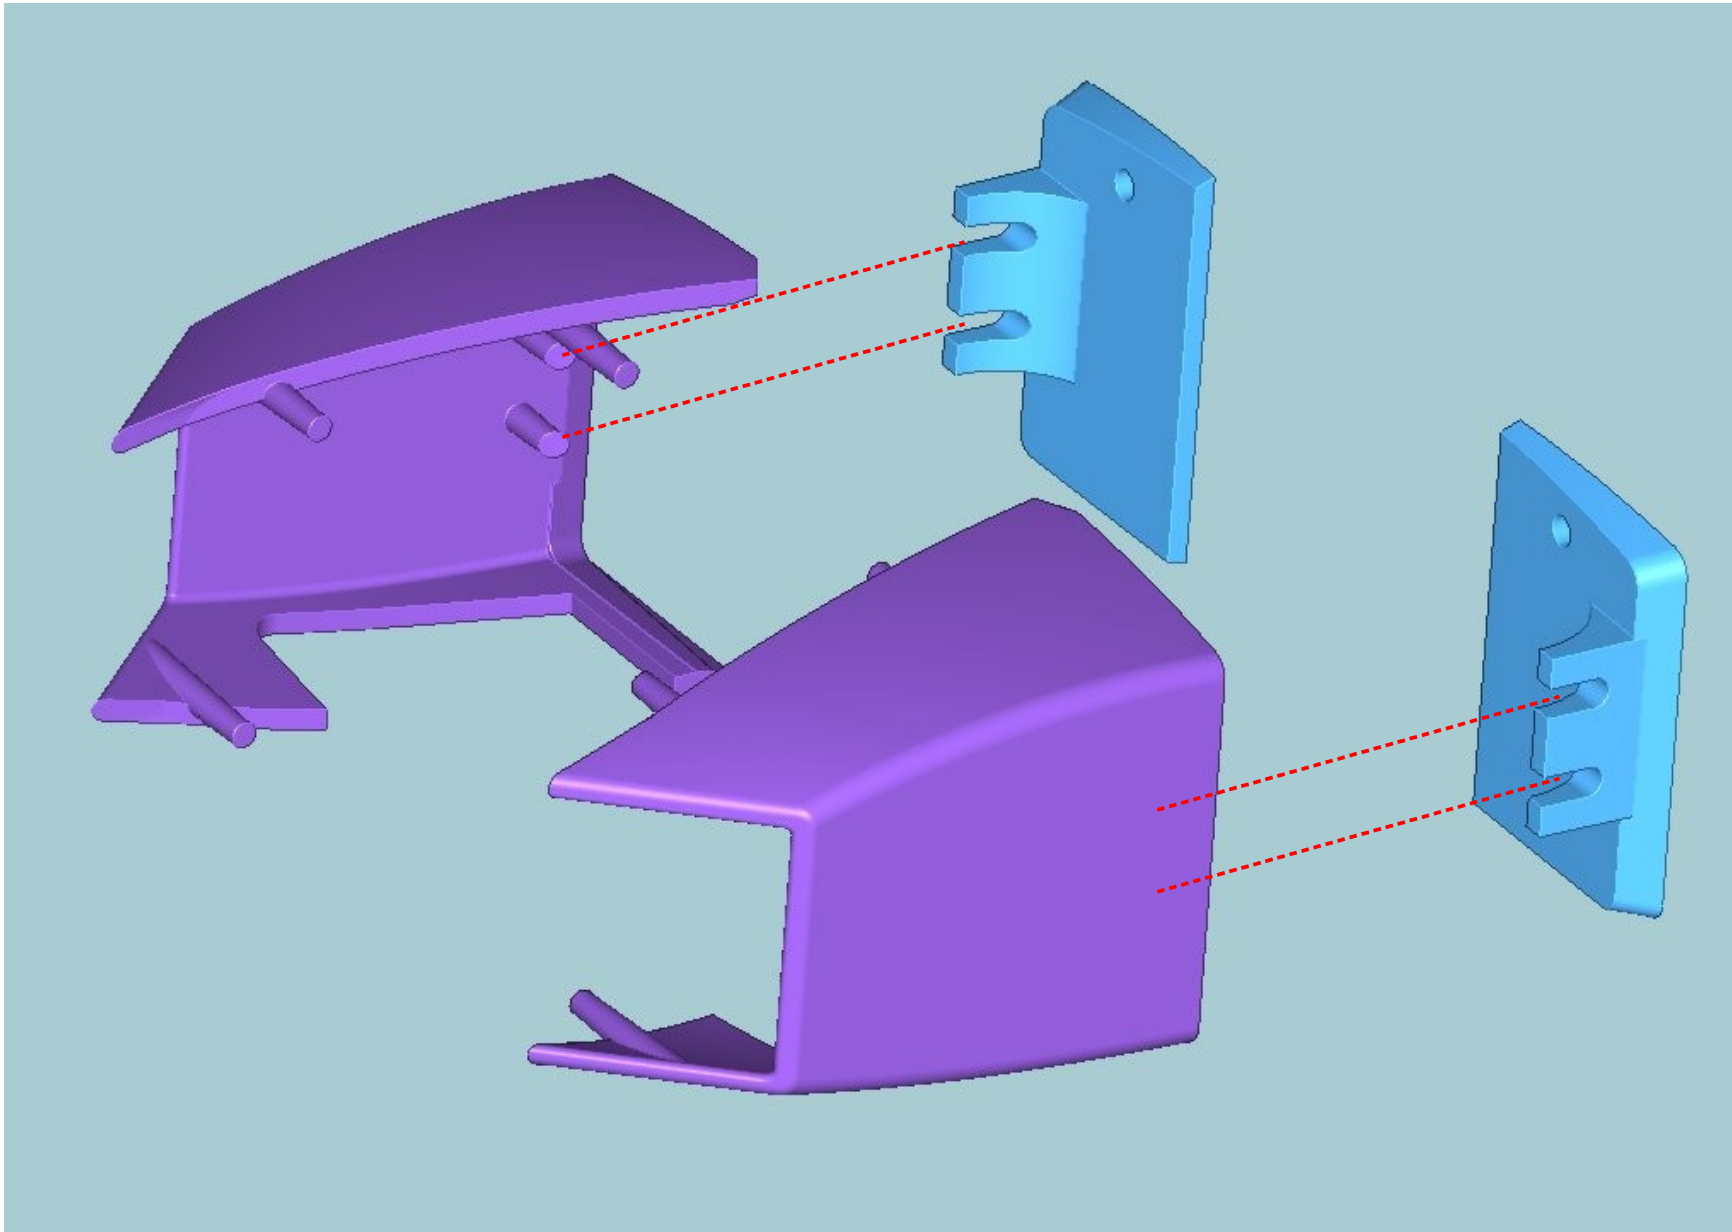


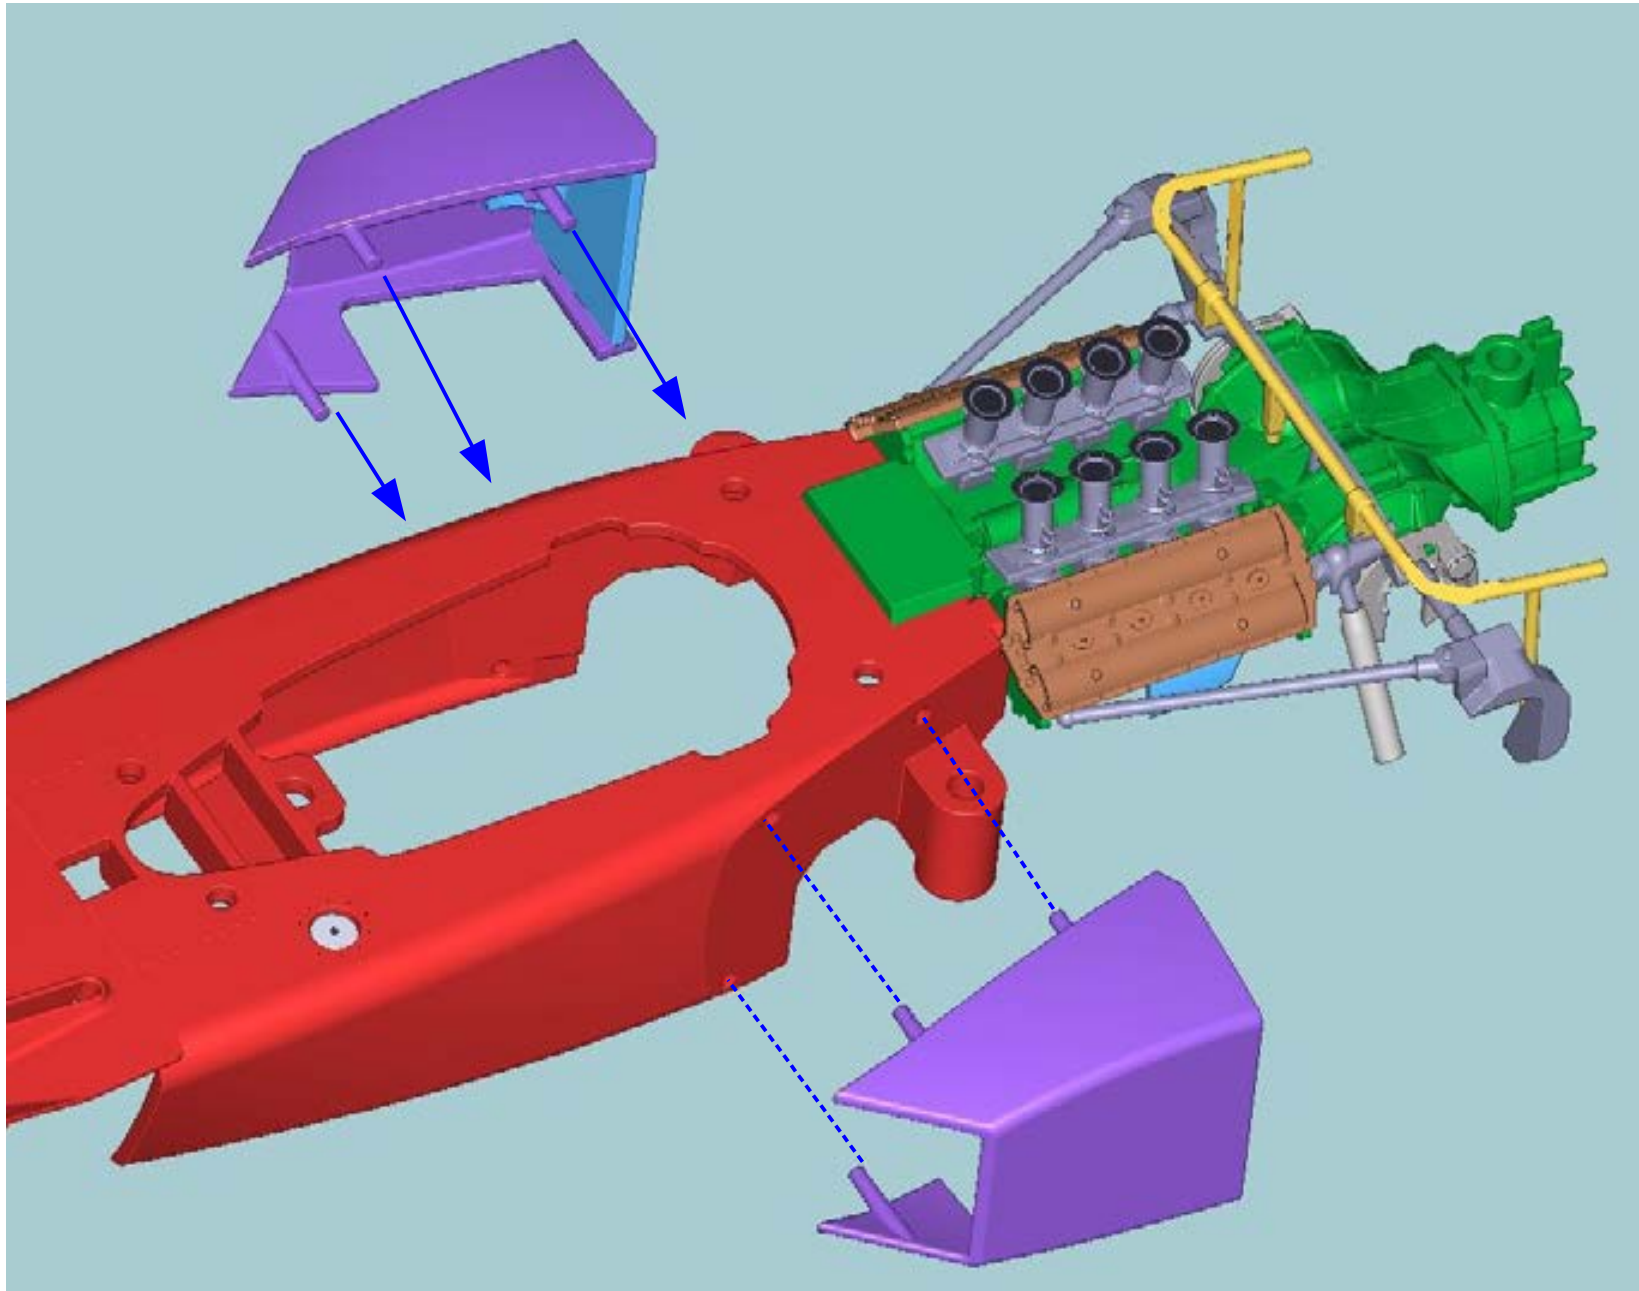

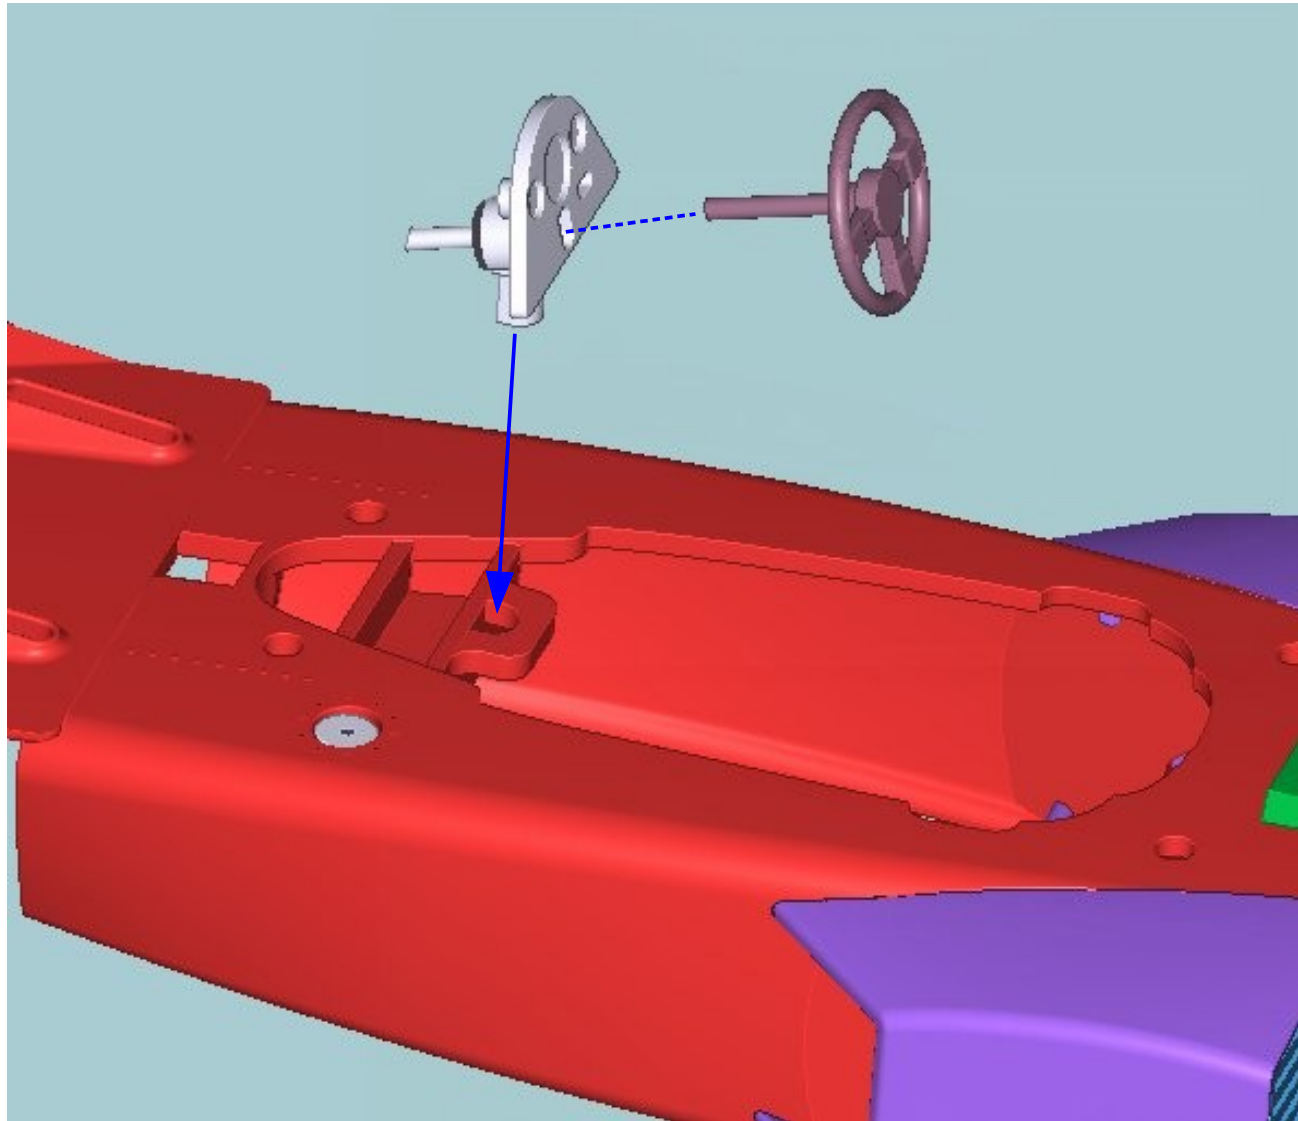


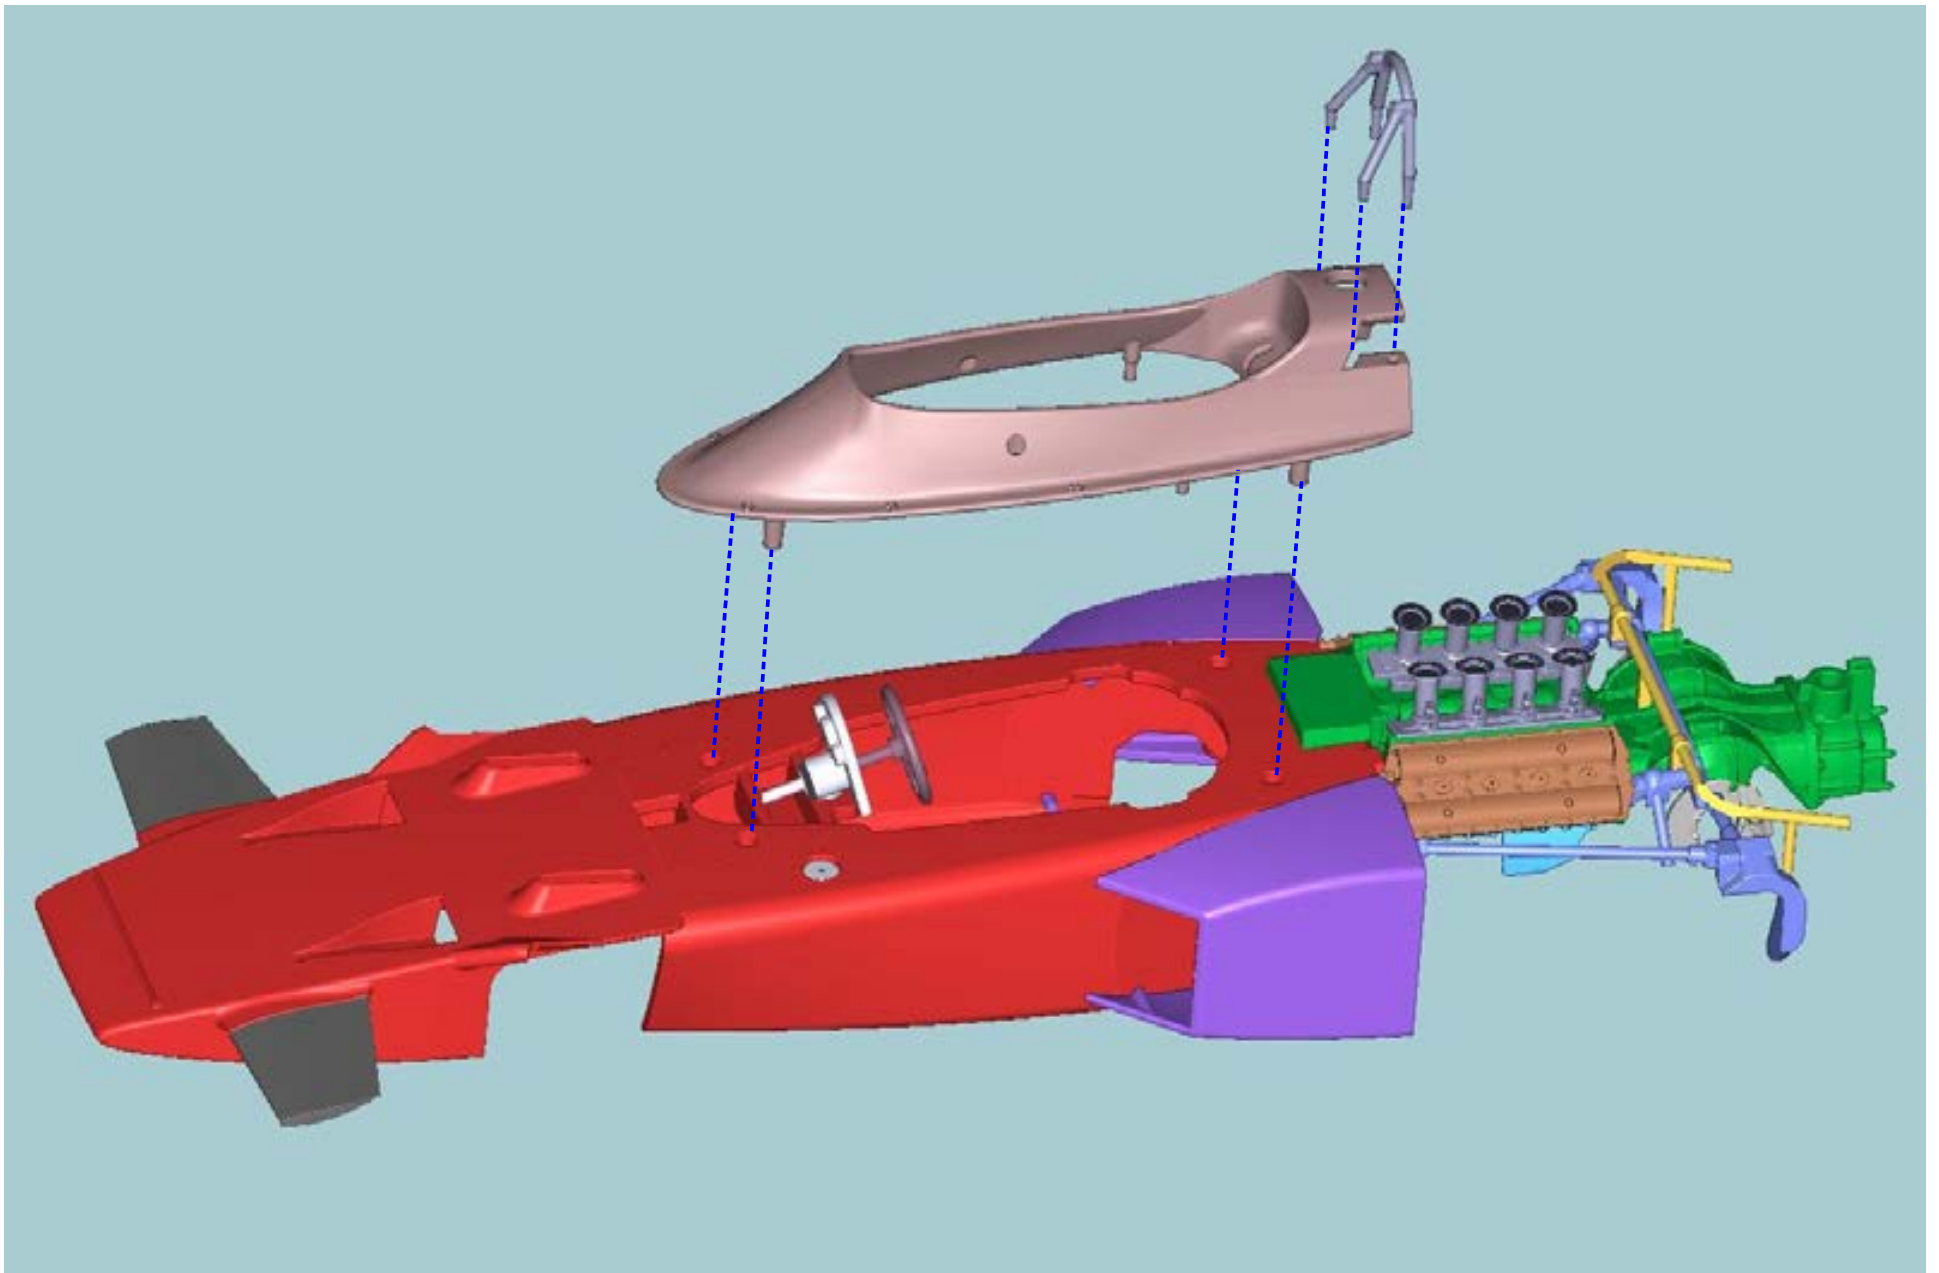



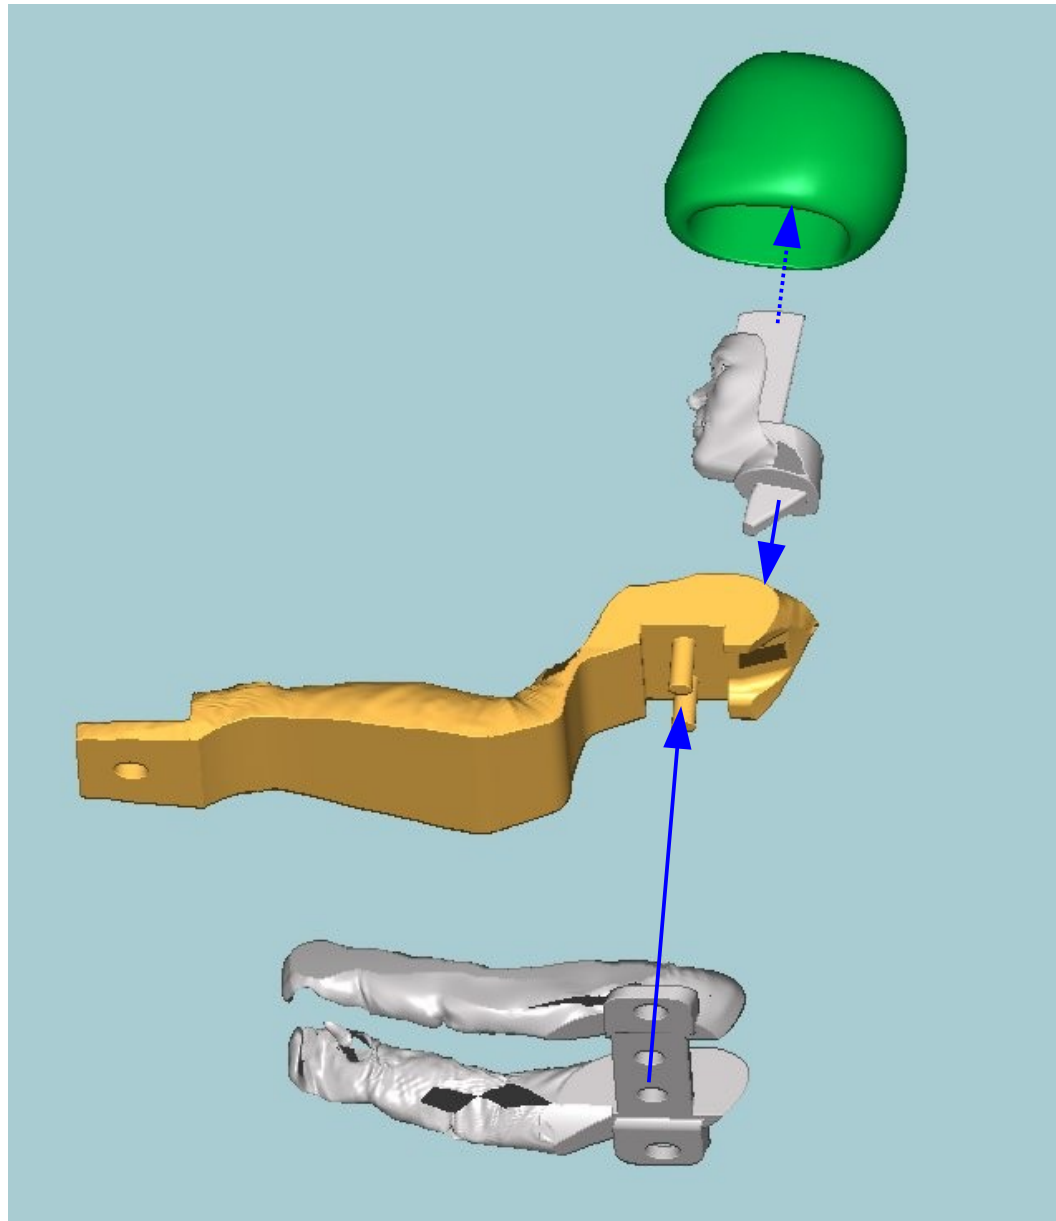



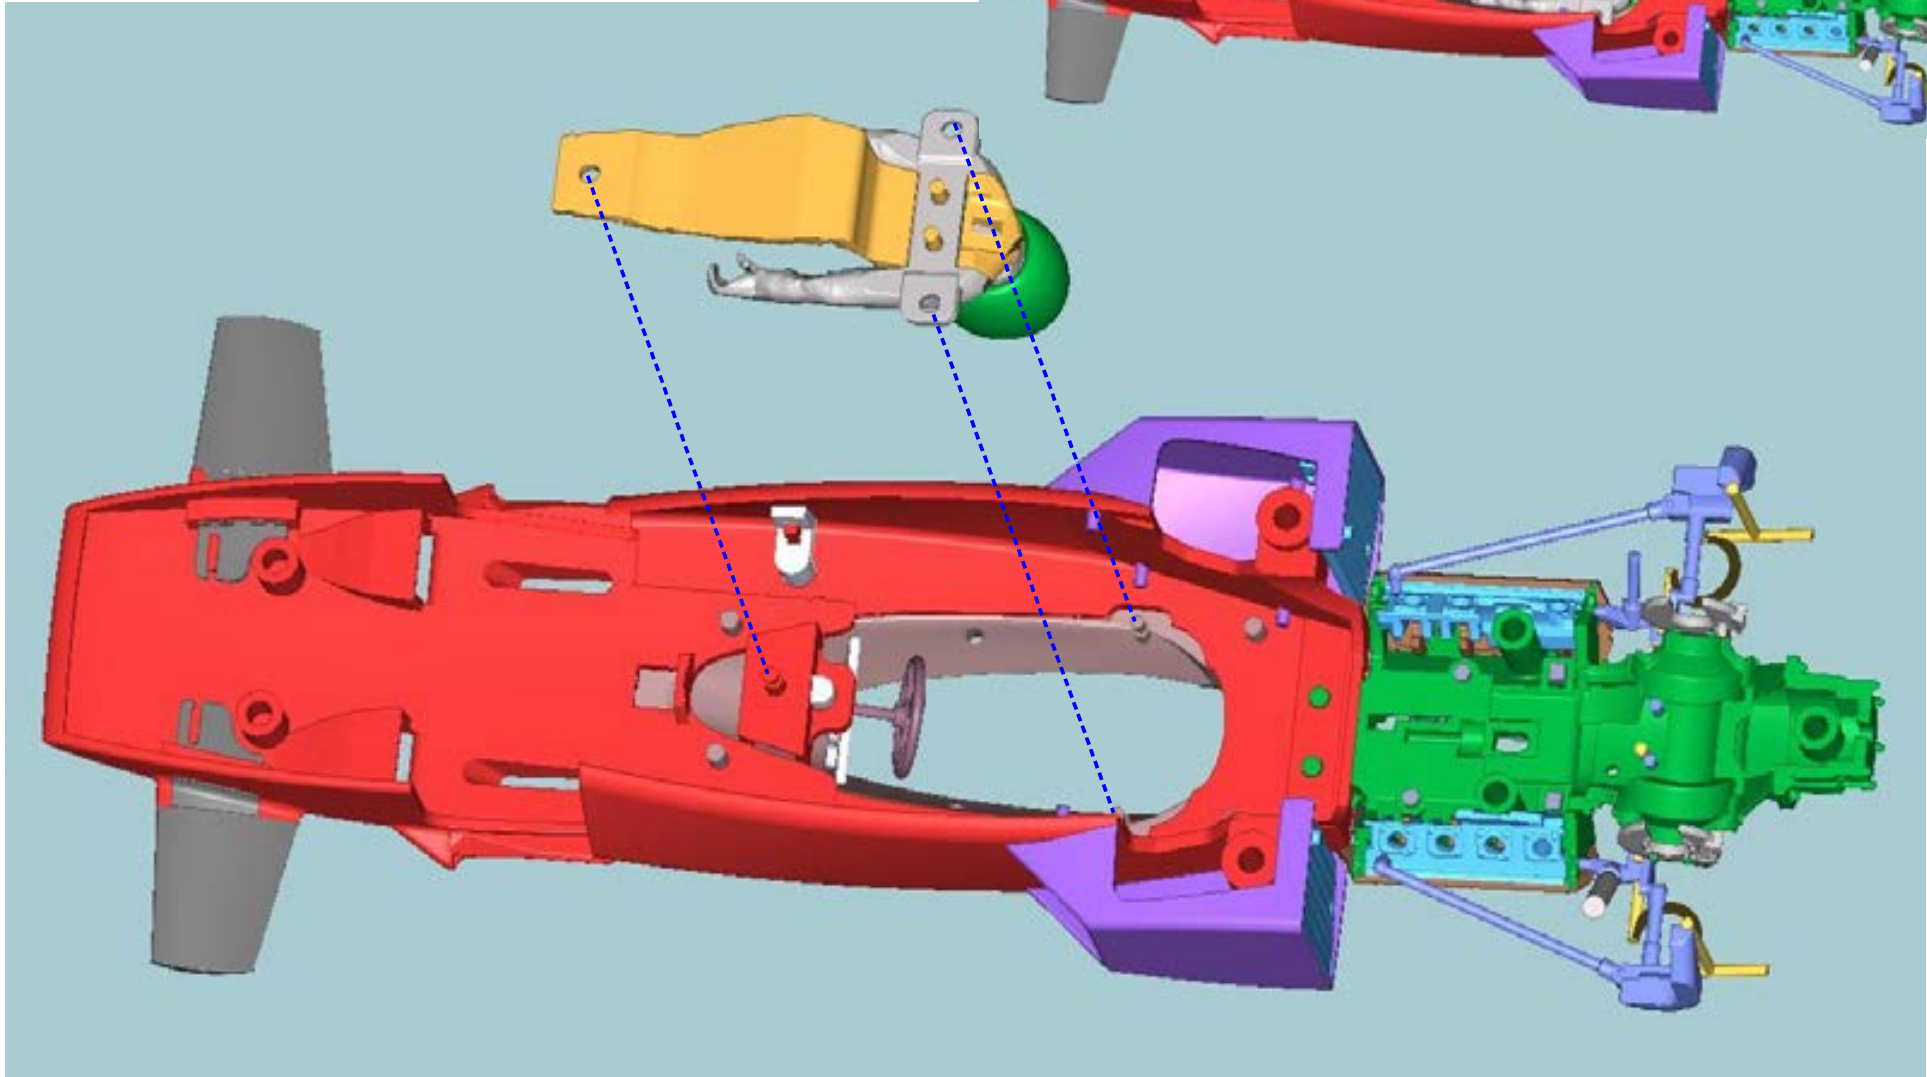




Lotus 72




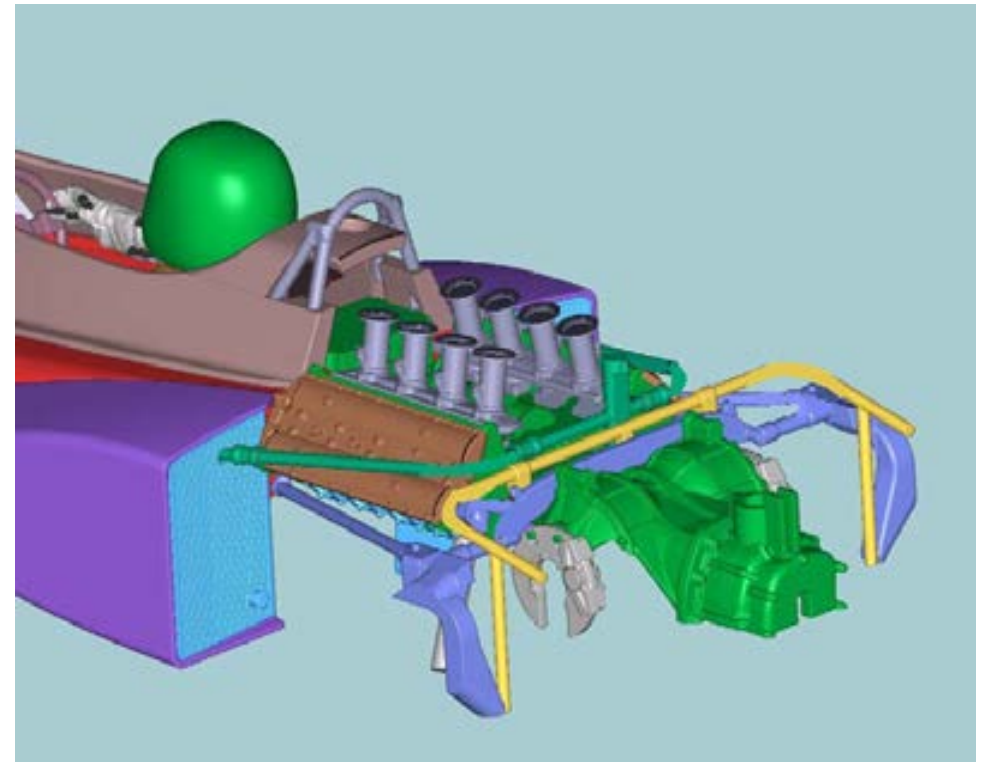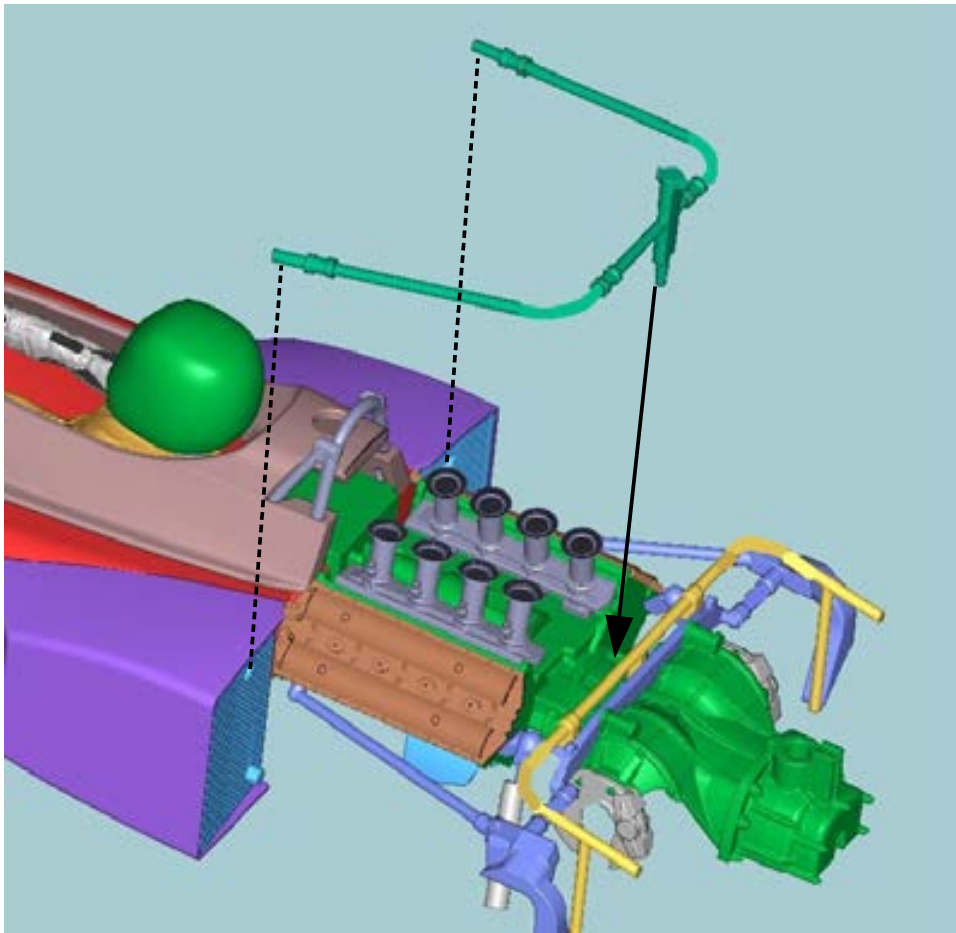


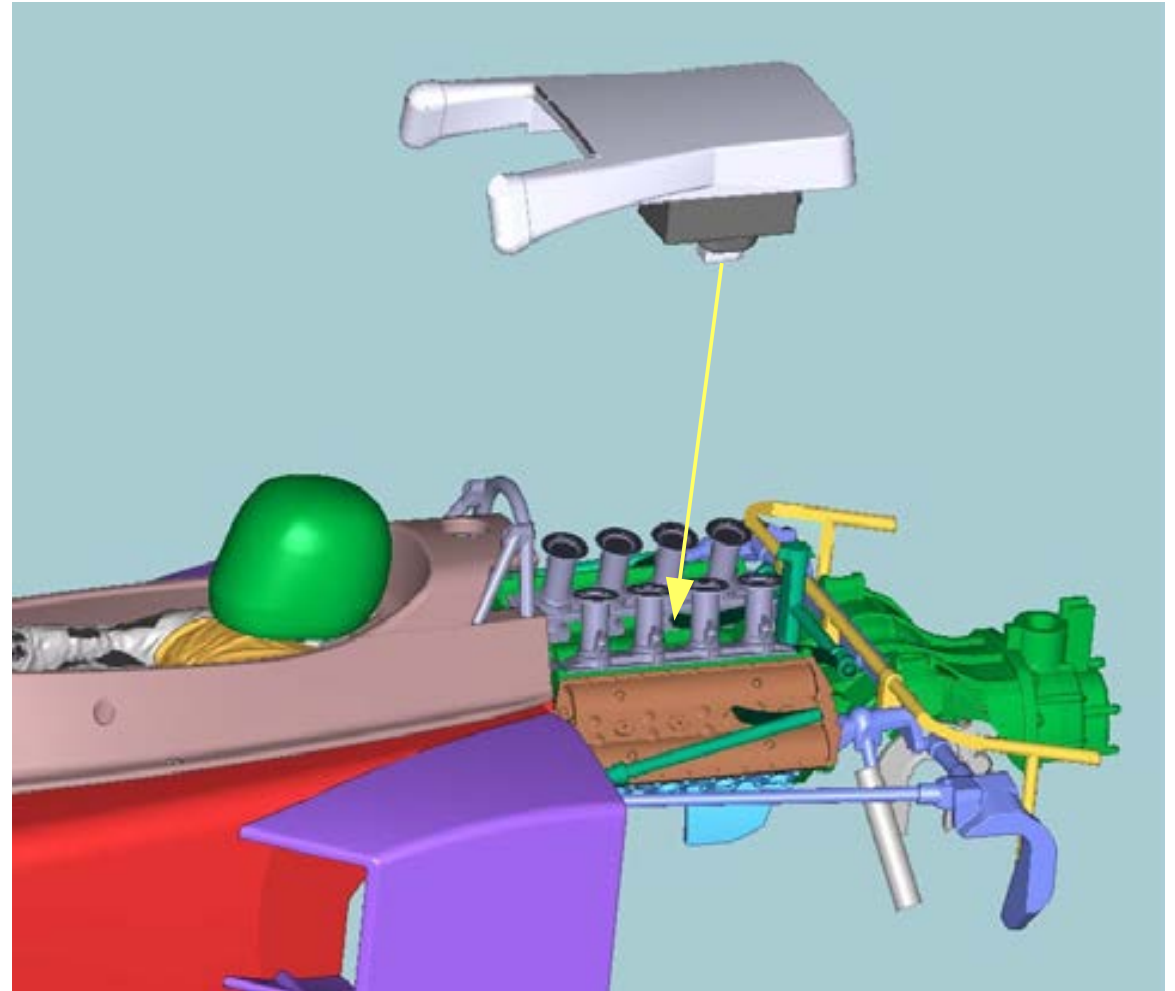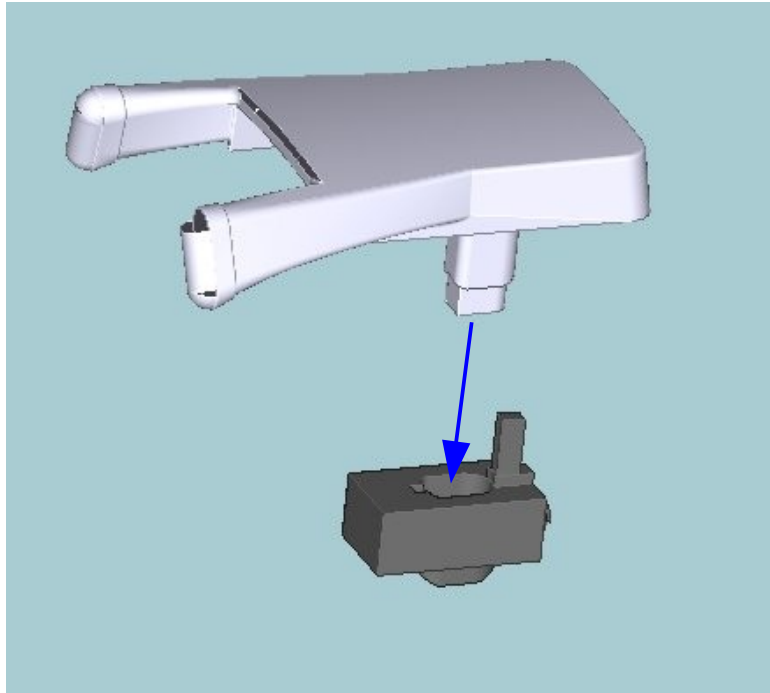


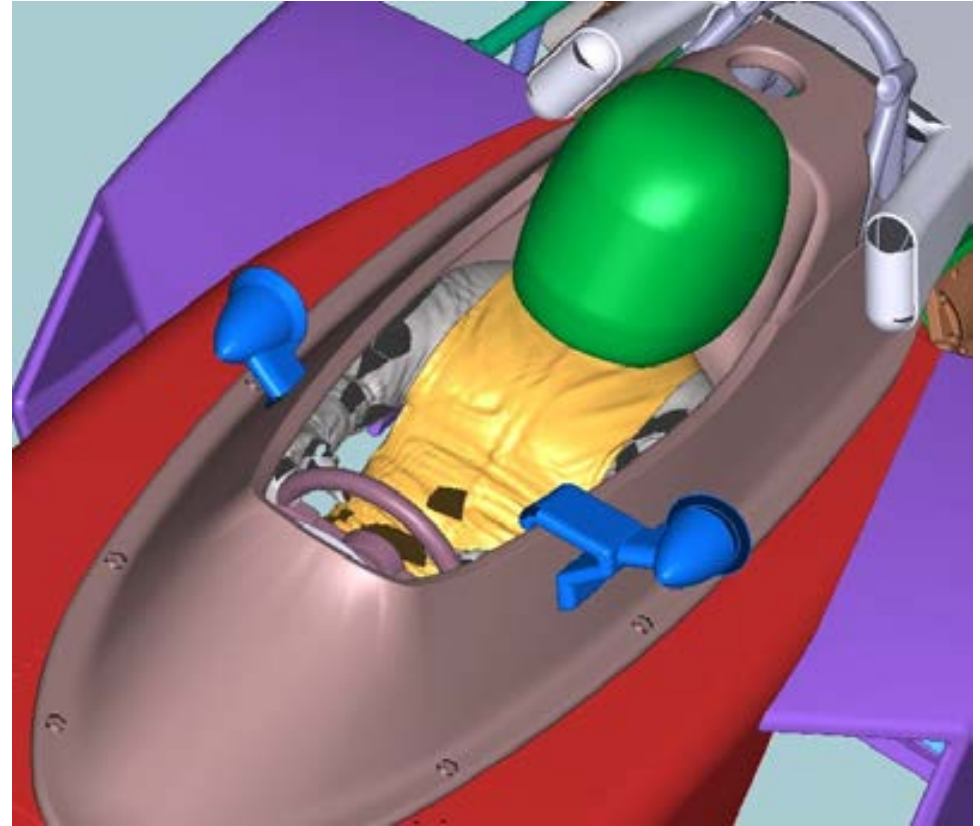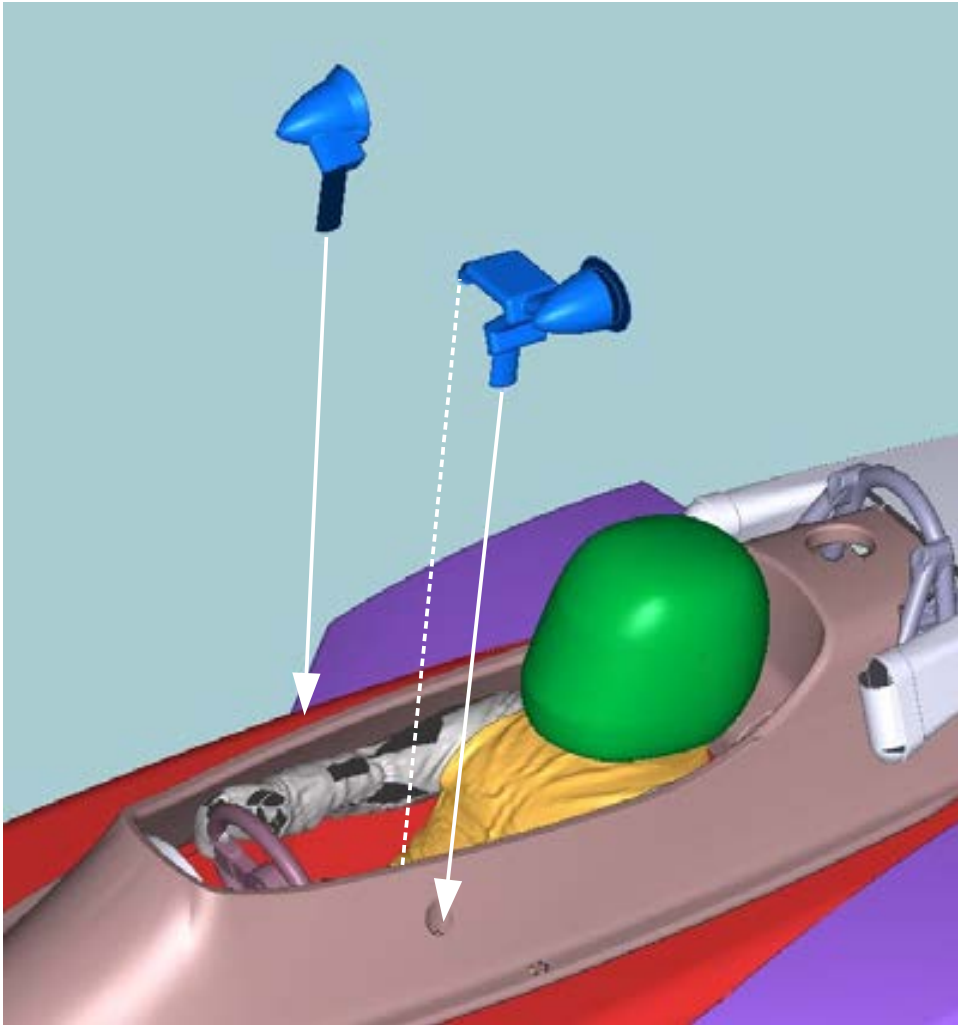


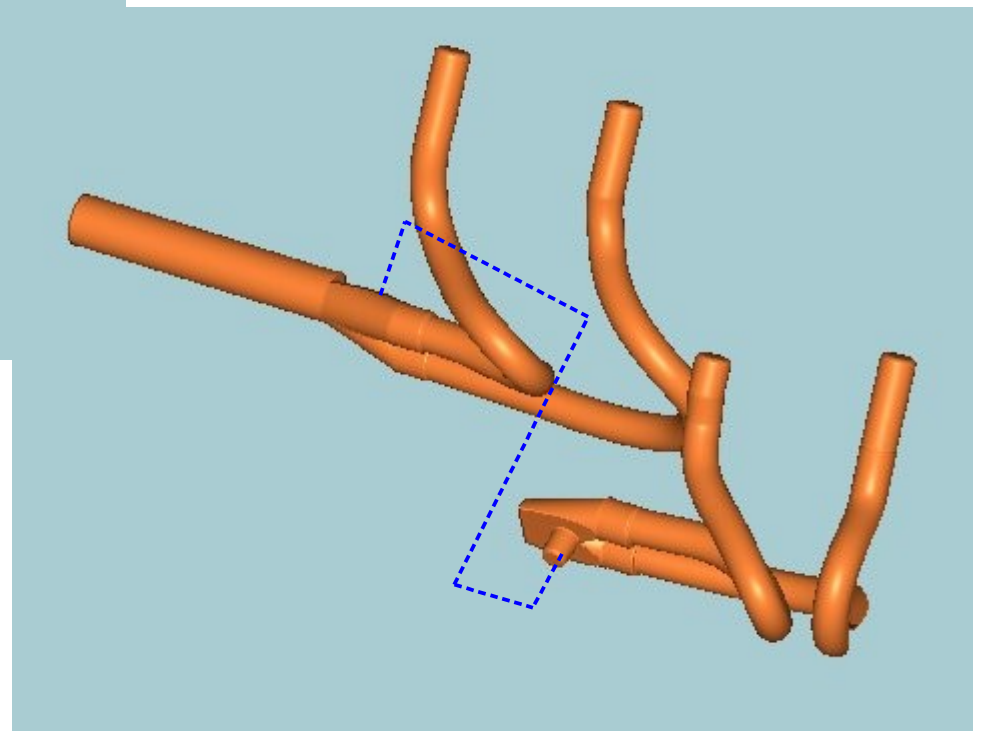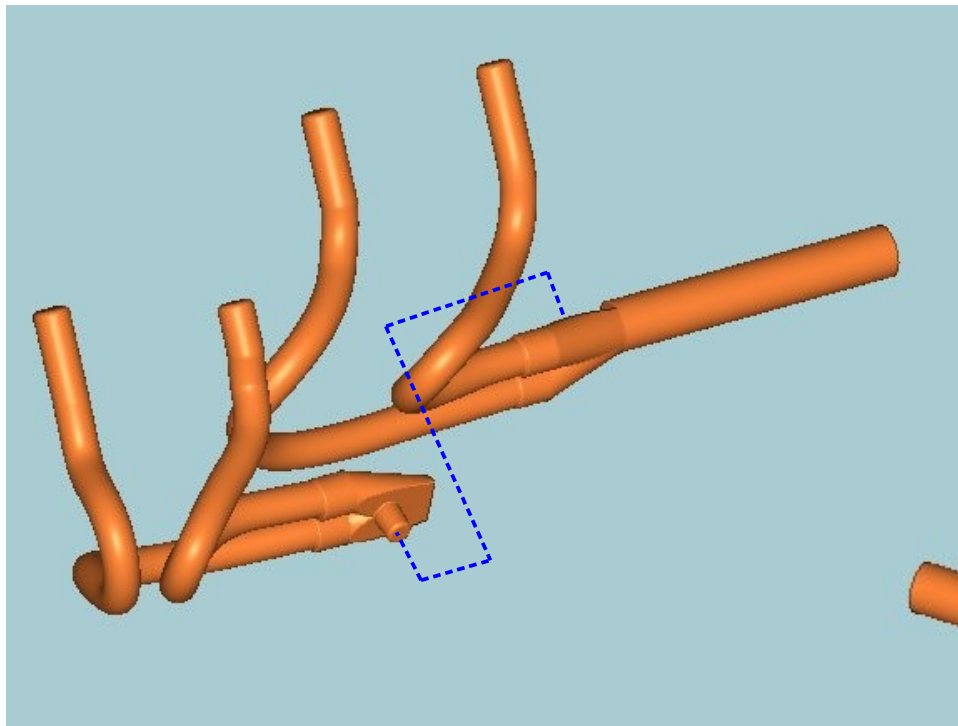


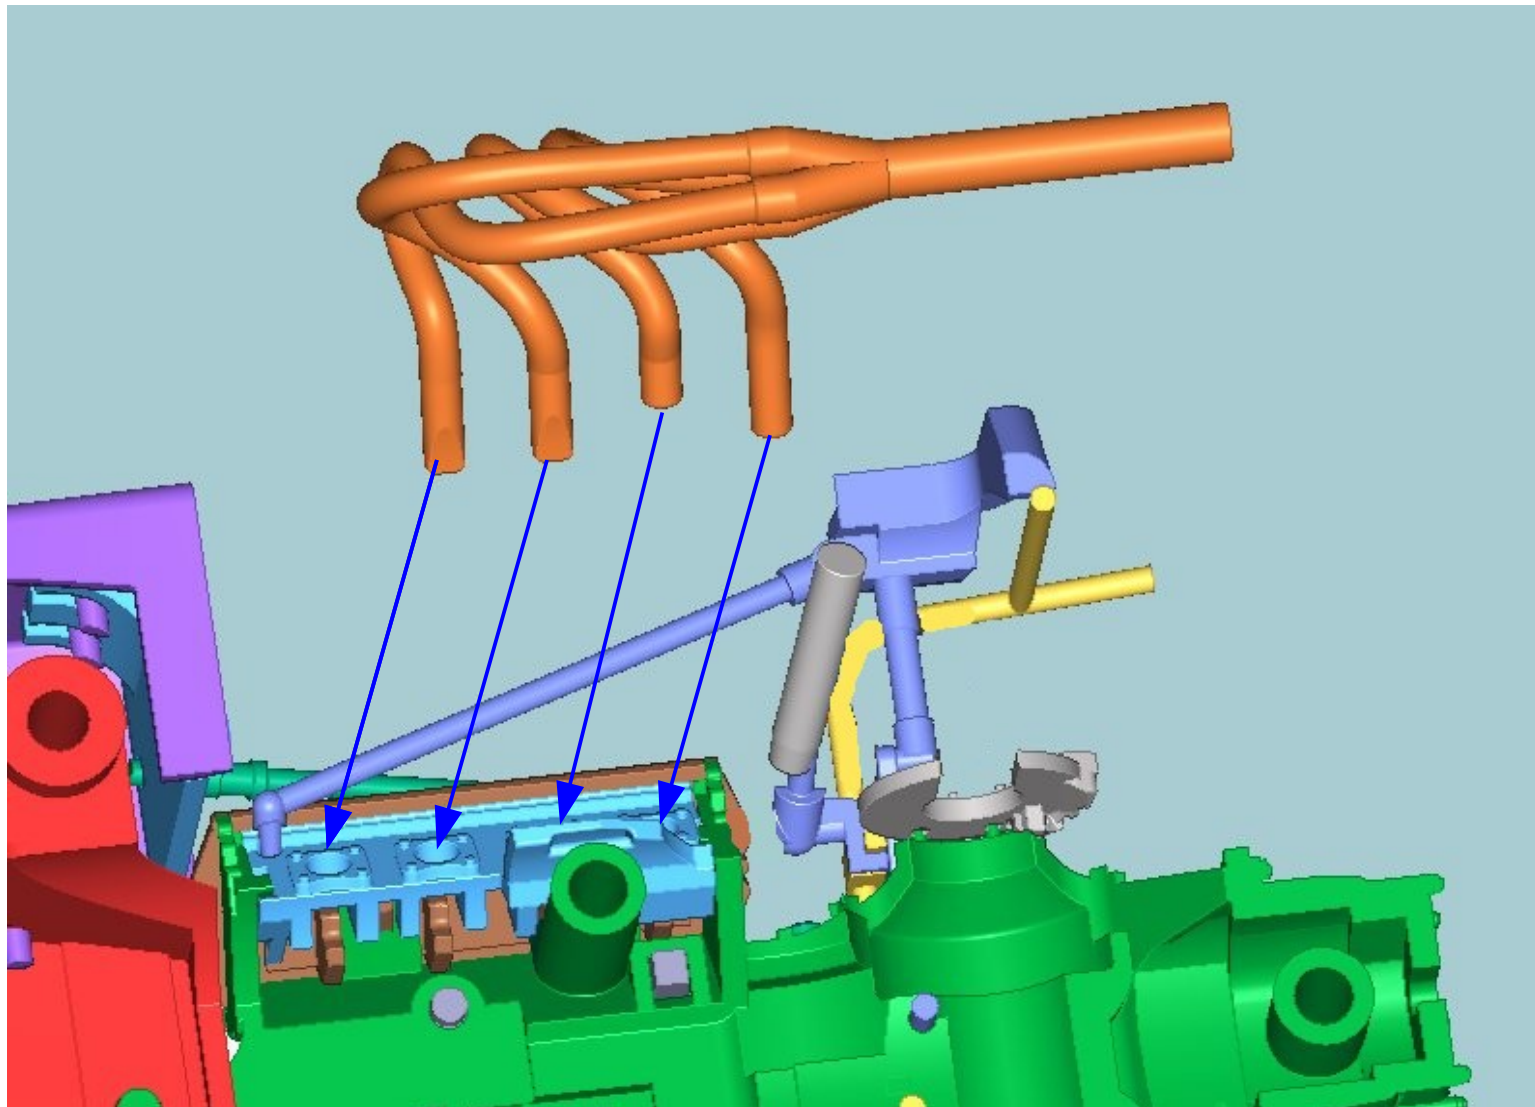


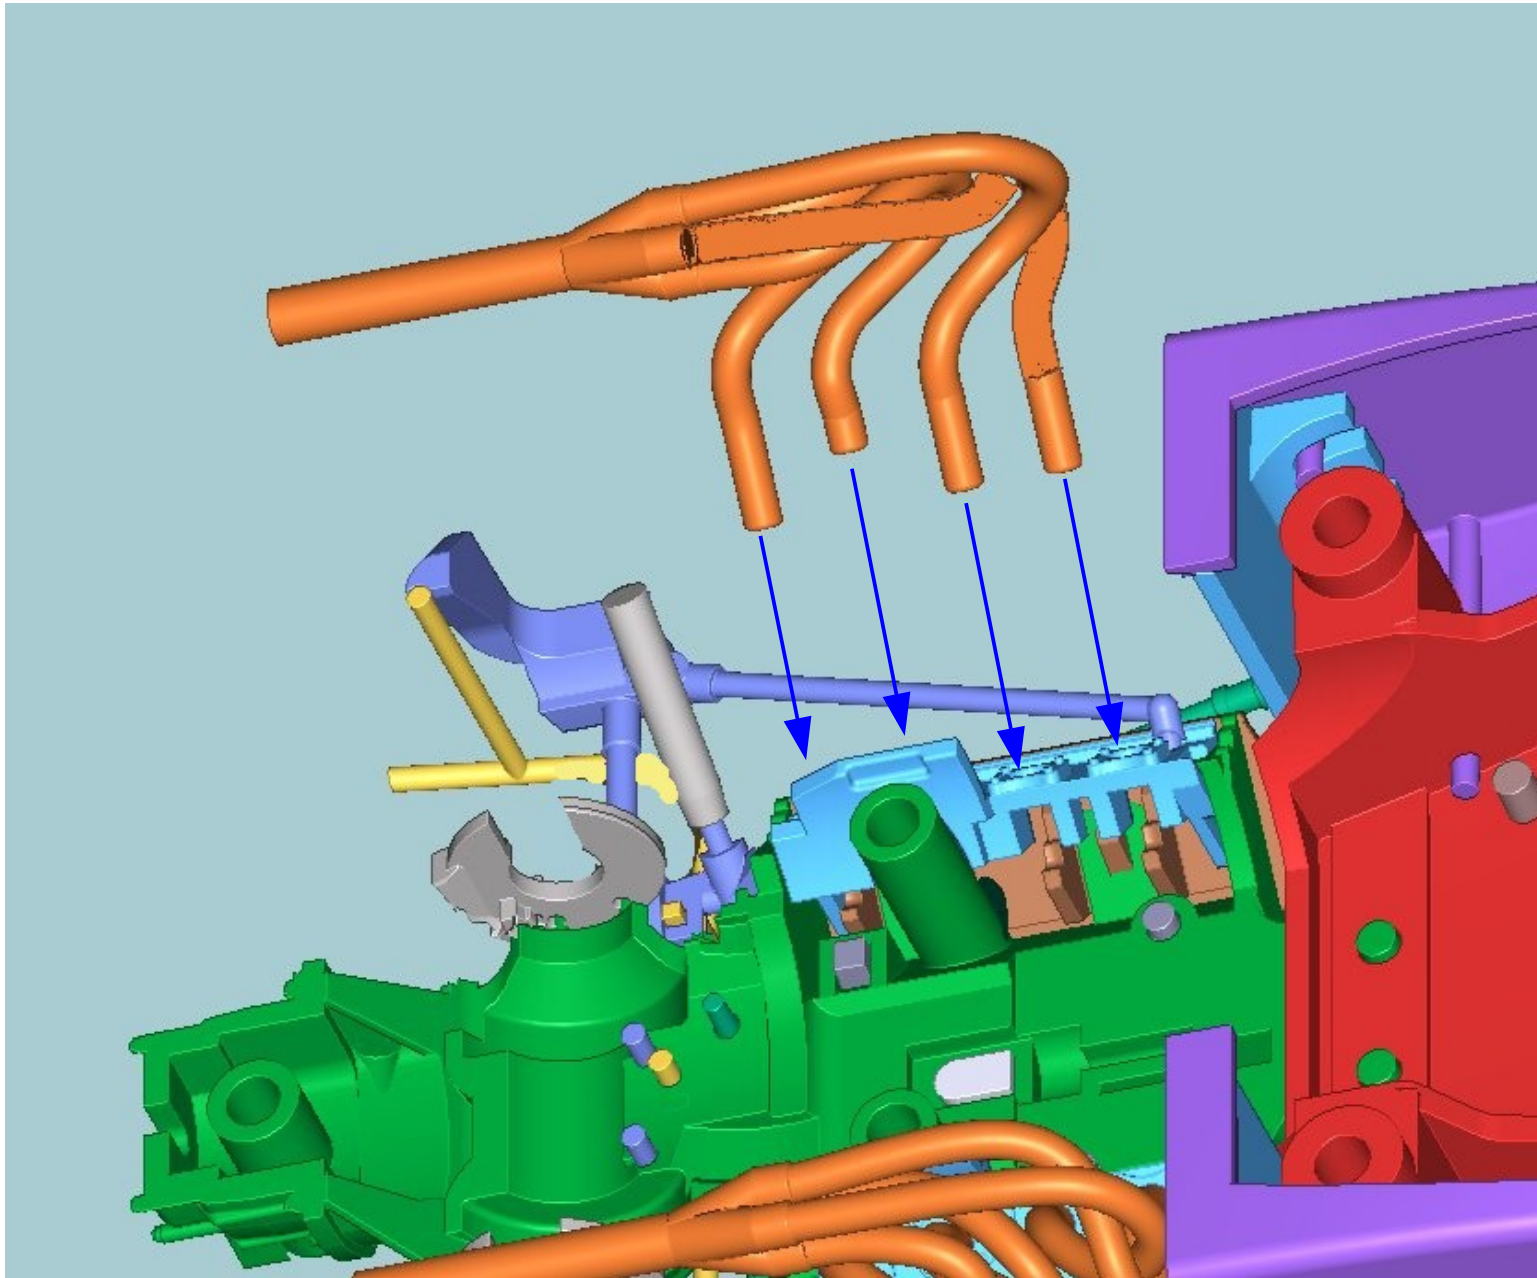

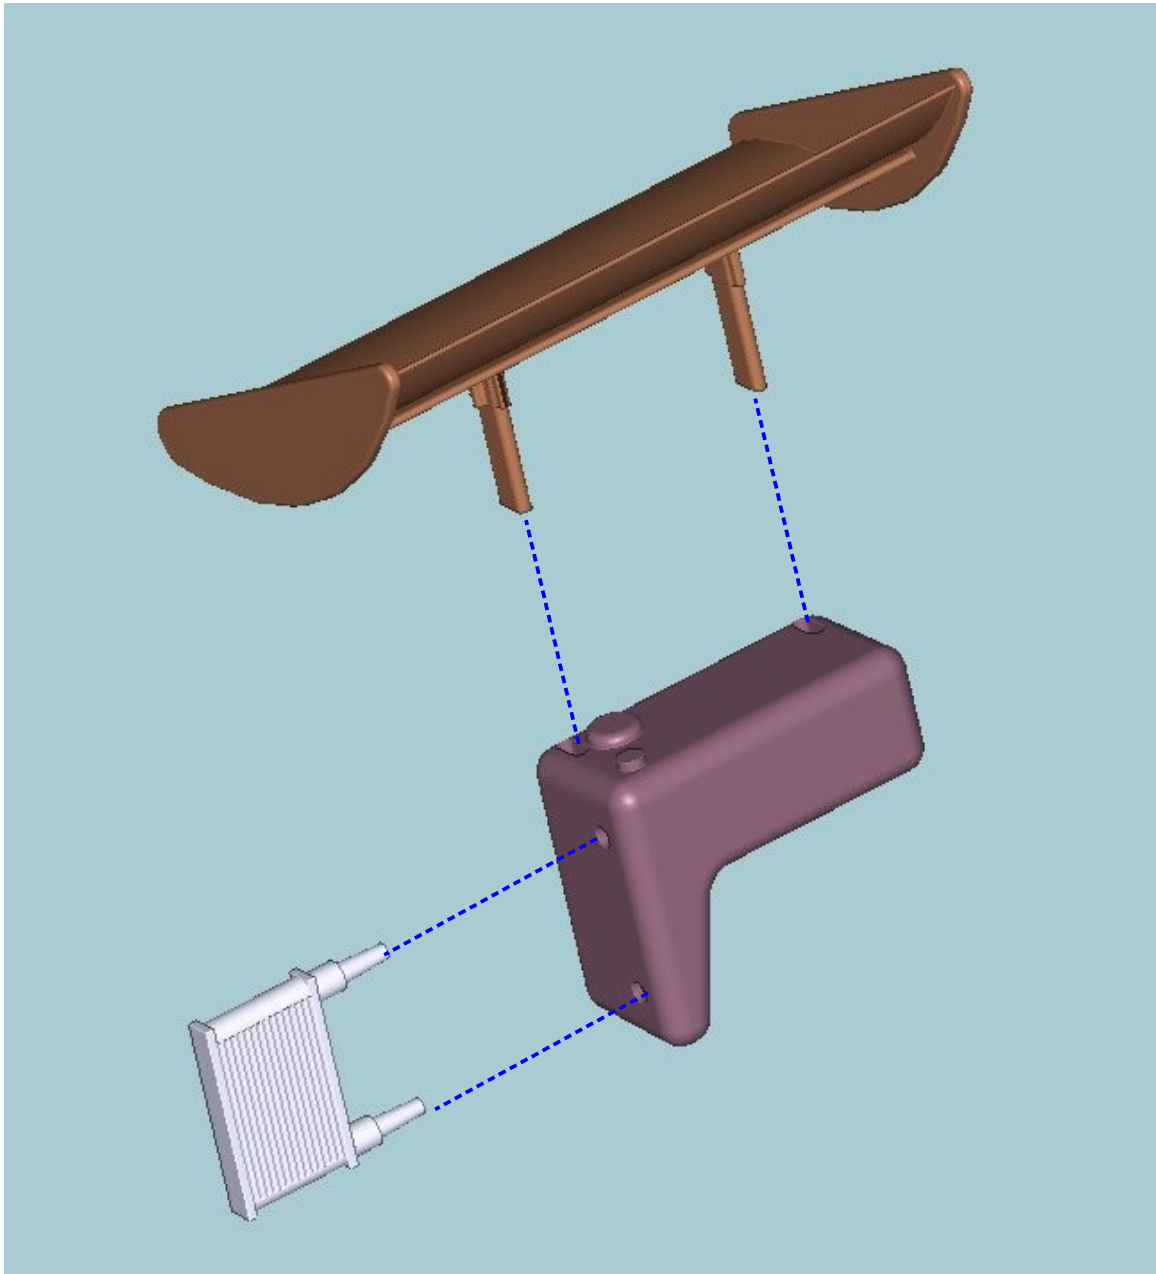

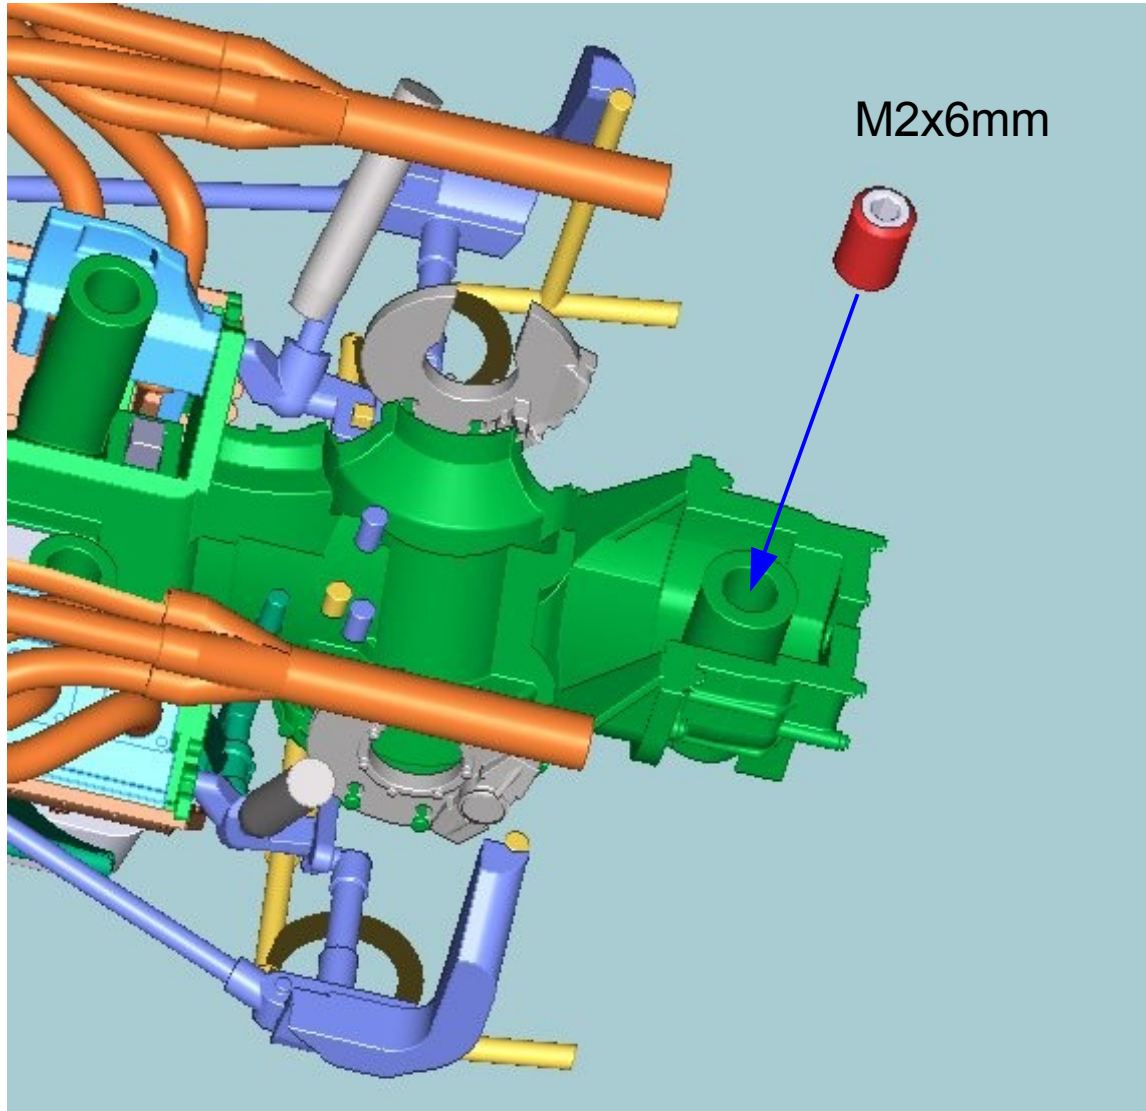

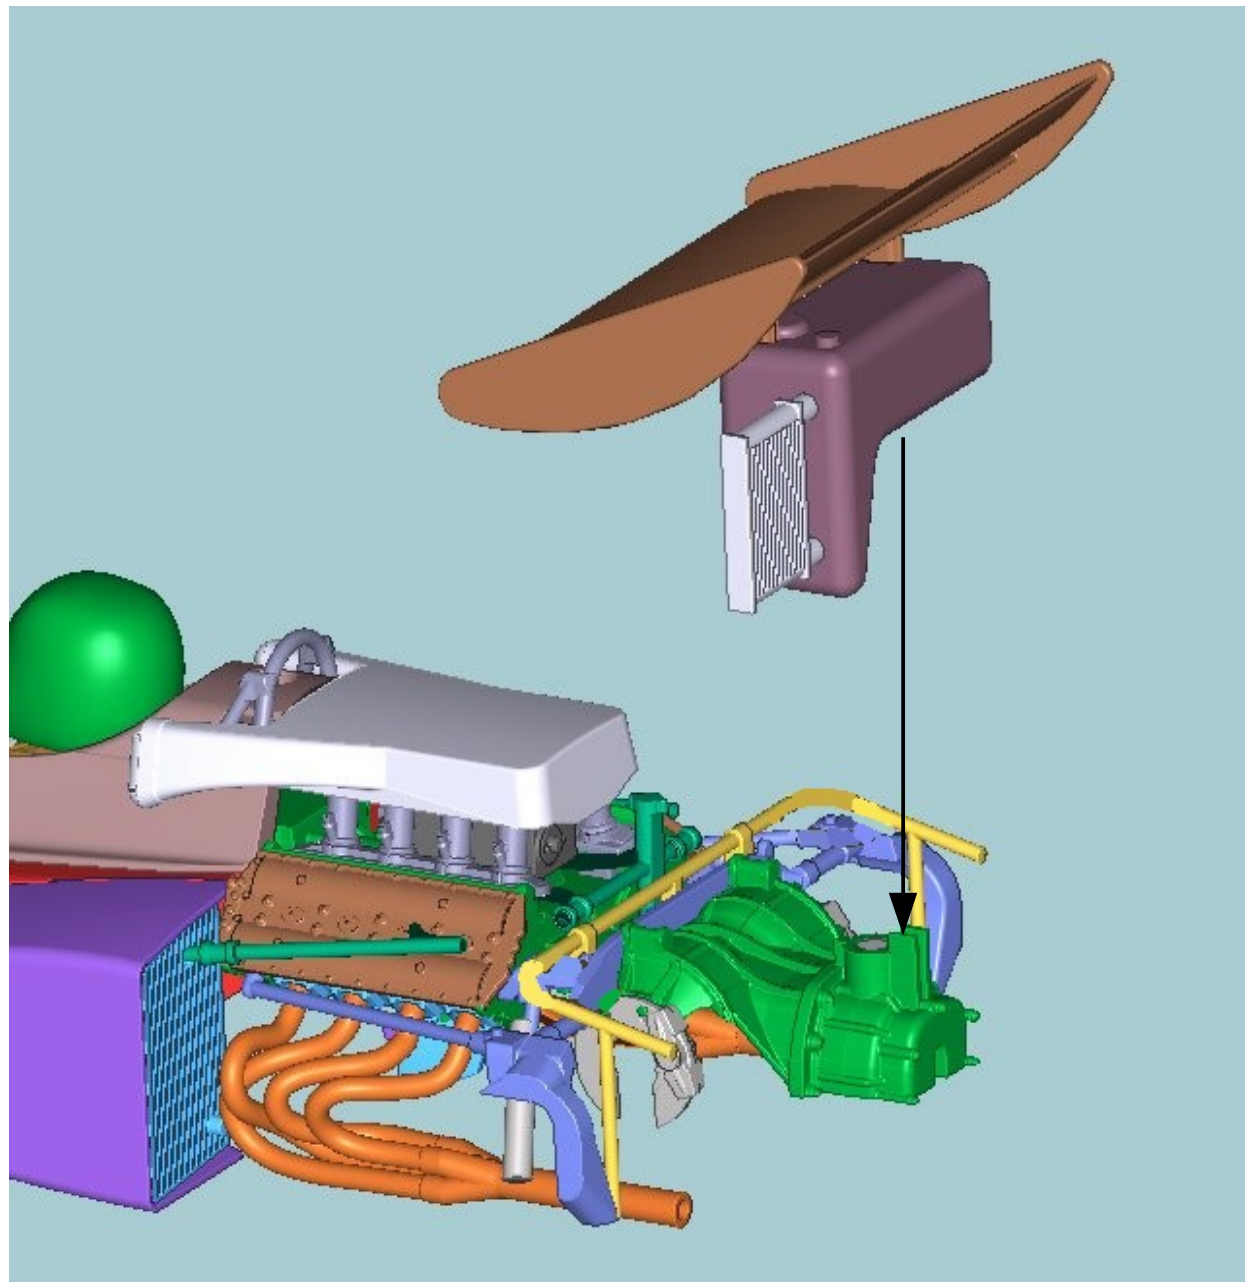

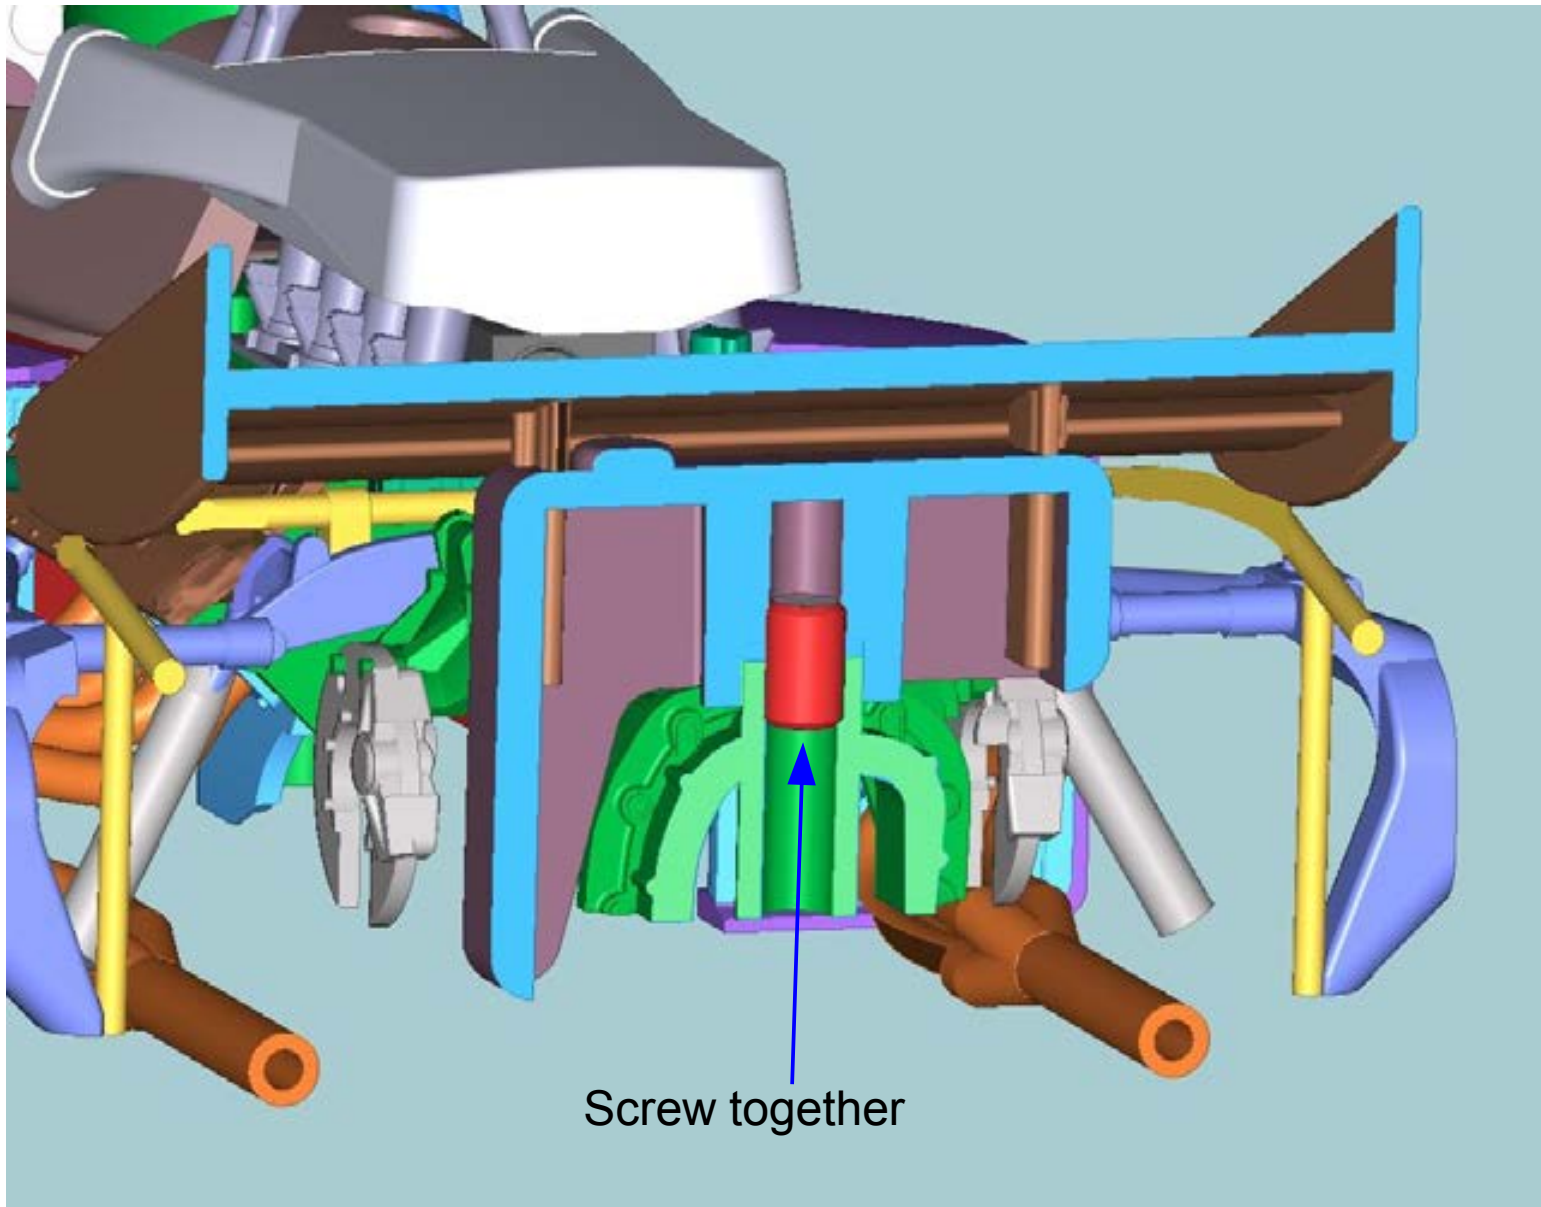

Screw together

